


Parts Section

Chapter 1

Engine


Engine Mount, Components and Belts

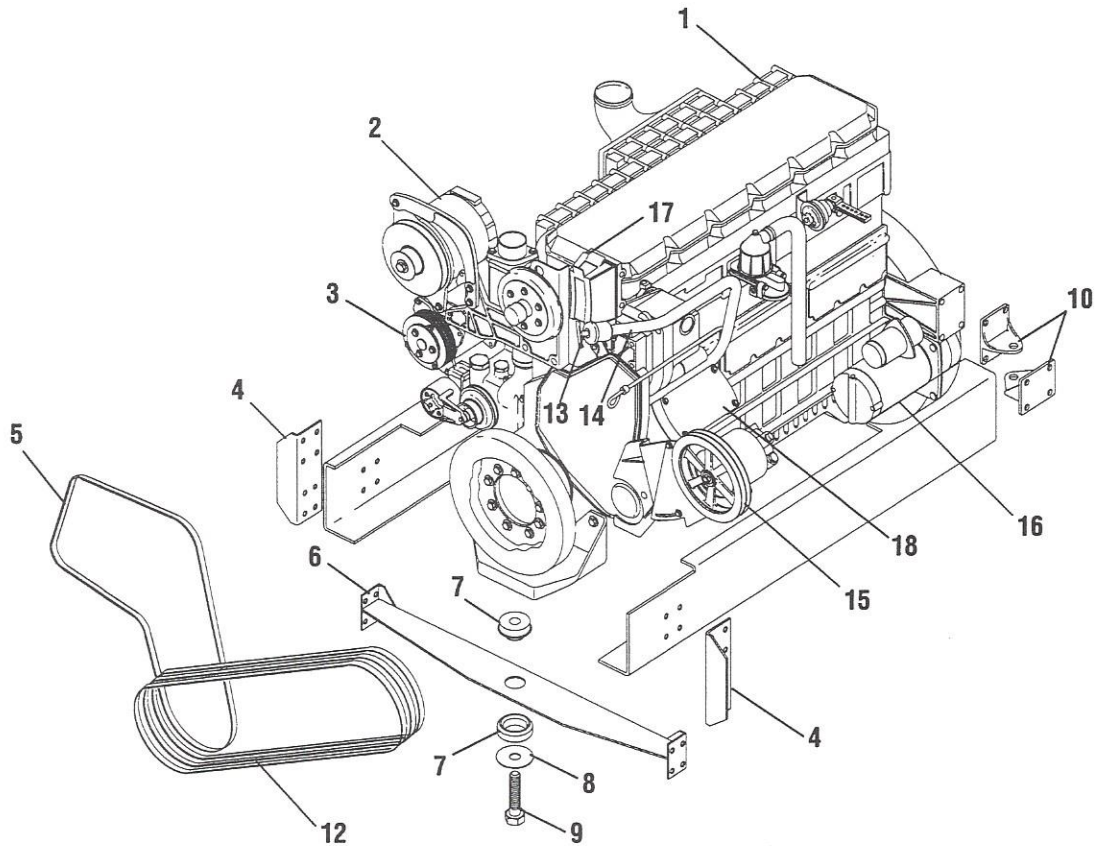

01-107-01

1.	53-24625-000	Engine Asm, Cat 3116, 250 HP	1
2.	51-24192-000	Alternator, 12V Delco	1
	50-24377-000	Cable w/ Diode Asm	1
3.	53-13807-001	Freon Compressor	1
4.	55-24265-000	Brkt, Frt Engine Support	2
5.	53-24727-000	Belt, 7 Rib	1
6.	55-24264-000	Support Asm, Frt Engine	1
7.	53-24269-000	Isolator Asm, Engine Mtg	3
8.	54-12601-012	Washer, Flat, Hard	5
9.	54-17491-026	Bolt Metric, M16 X 110 MM Lg	1
10.	55-24266-000	Brkt Asm, Engine Rr	2
11.	53-16690-007	Heater Immersion Block (N/S)	1
12.	53-02222-060	V-Belt	3
13.	53-24718-000	Cap, Oil Fill Tube	1
14.	55-24719-000	Tube Asm, Engine Oil Fill	1
15.	55-23022-000	Pulley, Hydraulic Pump	1
16.	53-19322-006	Starter Asm, 12V	1
17.	53-24744-001	Separator, Fuel/Water	1
18.	Furn w/Engine	Air Compressor	1


Fuel System

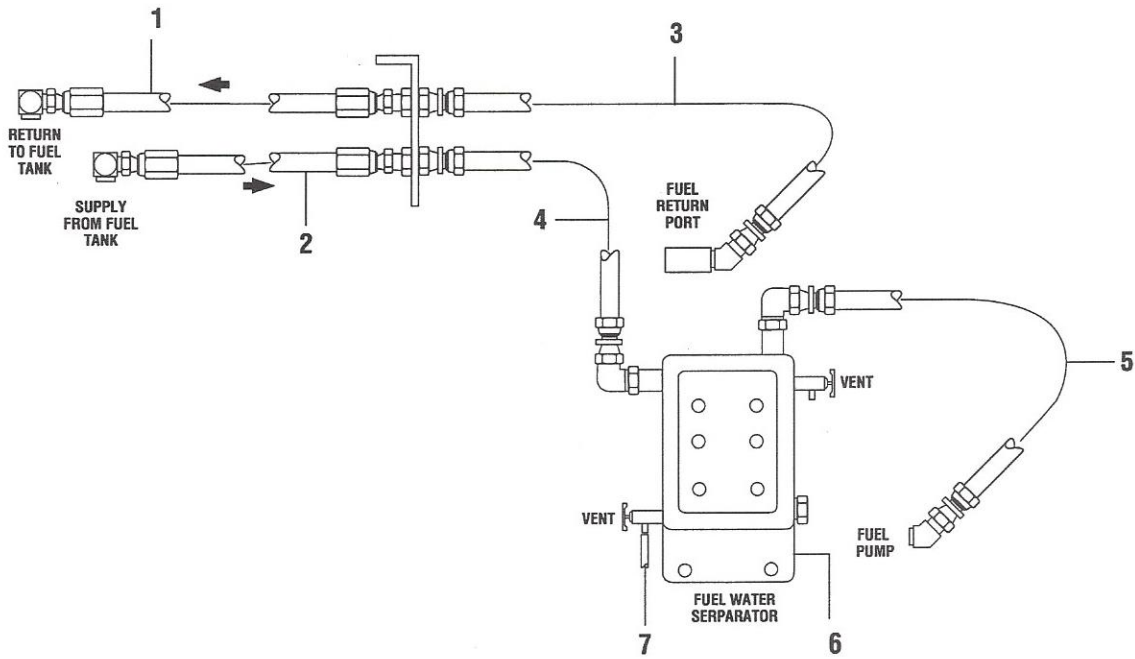

01-005-01

- | | |
|---|---|
| 1. 46-06A1010-2050 Hose Asm | 1 |
| 2. 46-08A1110-2320 Hose Asm | 1 |
| 3. 46-06D3030-0810 Hose Asm | 1 |
| 4. 46-06D3030-0860 Hose Asm | 1 |
| 5. 46-06D3030-0140 Hose Asm | 1 |
| 6. 40-22330-001 Plate, Fuel/Water Sep Mtg | 1 |
| 7. 56-00513-20.00 Hose, Drain | 1 |


Fuel Tank Mount

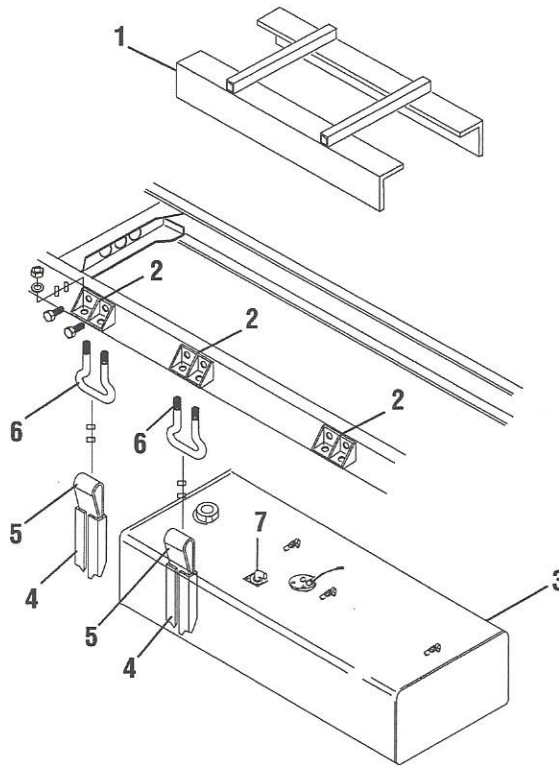

01-006-04

- | | | | |
|----|--------------|-------------------------------|---|
| 1. | 42-15997-000 | Brkt Asm, Fuel Tank | 1 |
| 2. | 42-15228-000 | Brkt Asm, Fuel Tank Mtg | 6 |
| 3. | 53-22004-000 | Tank Asm, Fuel | 1 |
| 4. | 55-07709-000 | Liner, Fuel Tank Mtg | 6 |
| 5. | 55-07708-000 | Strap, Fuel Tank Mtg | 6 |
| 6. | 55-07710-000 | Liner, Fuel Tank | 6 |
| 7. | 53-21370-000 | Vent, Fuel Tank | 1 |
| 8. | 40-15229-001 | Brkt LH, Fuel Tank Stop (N/S) | 1 |
| 9. | 53-22802-000 | Kit, Fuel Tank Fill | 1 |


Engine Cooling System

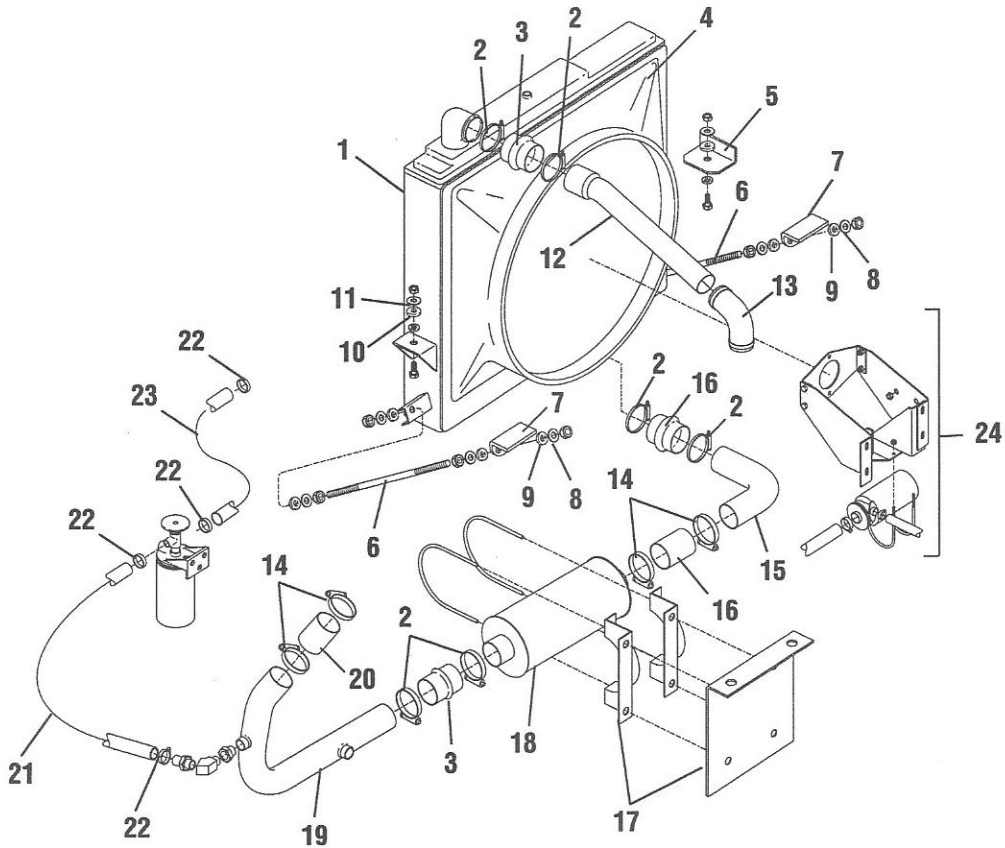

01-104-00

1.	53-18056-000	Radiator	1	22.	53-09007-000	Clamp, 5/8"	4
2.	53-21364-012	Clamp, Constant Tension	8	23.	56-09014-018.00	Hose, 5/8" Silicone	1
3.	56-00031-019	Hose, Hump	2	24.	Ref: Page 6-3	Hydraulic Fan Motor	1
4.	43-18100-000	Shroud, Fan	1				
5.	42-18514-000	Brkt, Rr Radiator Support	1				
6.	40-10575-003	Brace, Radiator	2				
7.	40-18507-000	Brkt, Radiator Support	2				
8.	41-00035-011	Washer, Flat	A/R				
9.	56-07695-000	Bushing, Radiator Mtg	A/R				
10.	41-00035-008	Washer, Flat	A/R				
11.	55-02352-000	Mount, Vibration	A/R				
12.	55-24418-000	Pipe, Radiator Inlet	1				
	53-09054-000	Valve, Bleeder	1				
13.	56-24594-000	Elbow, 90°	1				
14.	53-21364-007	Clamp, Constant Tension	4				
15.	55-24416-000	Pipe, Radiator Outlet	1				
16.	56-16734-000	Hose, Rubber	2				
17.	42-24415-000	Brkt Asm, Oil	1				
18.	53-11959-000	Oil Cooler Trans	1				
19.	55-24417-000	Pipe, Engine Inlet	1				
20.	56-09021-004.00	Hose, Silicone	1				
21.	56-09014-034.00	Hose, 5/8" Silicone	1				

Engine Exhaust System

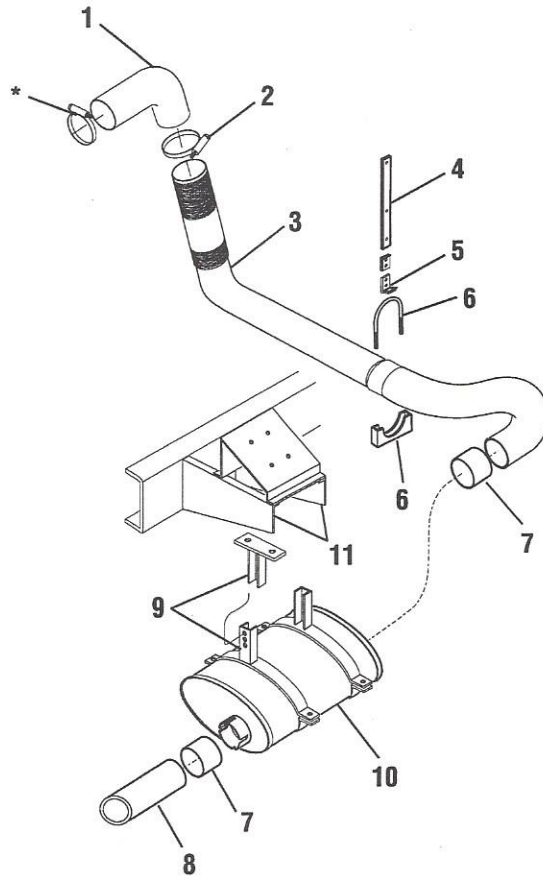


01-004-01

1.	55-24552-000	Pipe Asm, Turbo Outlet	1
2.	53-02322-0002	Clamp, 4"	1
3.	55-24516-000	Pipe Asm, Exhaust	1
4.	40-24556-000	Brkt, Exhaust Support	1
5.	53-15440-000	Brkt, Exhaust Pipe Hanger	1
6.	54-00029-001	Clamp, Exhaust	1
7.	53-02322-001	Clamp, 5"	2
8.	55-24553-000	Pipe, Exhaust Tail	1
9.	42-24916-000	Brkt, Muffler Mtg	2
10.	53-24982-000	Muffler	1
11.	Ref: Page 1-6	Brkt, Muffler Rear Mtg	1

Note: * Indicates Part of Engine


Engine Air Intake System and Aftercooler

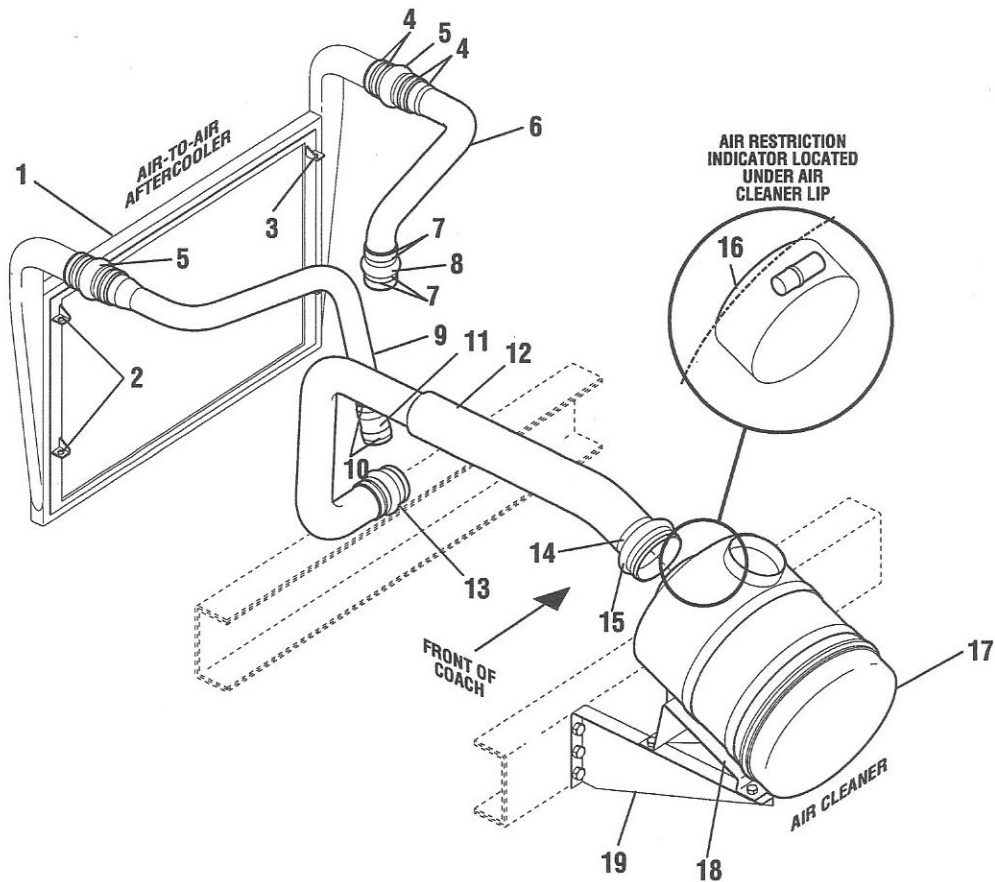

01-003-01

1.	53-18865-000	Cooler, Charge Air	1
2.	40-18531-002	Angle, LH Charge Air Cleaner Mtg	2
3.	40-18531-001	Angle, RH Charge Air Cleaner Mtg	2
4.	53-18882-001	Clamp, Constant Torque	8
5.	56-18875-001	Hose, Hump, Hi Temp Silicone	2
6.	55-24484-000	Pipe, Charge Air Cooler Outlet	1
7.	53-18882-002	Clamp, Constant Torque	6
8.	56-18875-003	Hose, Hump, Hi Temp Silicone	1
9.	55-24483-000	Pipe, Charge Air Cleaner Inlet	1
10.	53-18882-004	Clamp, Constant Torque	2
11.	56-24485-000	Hose, Hi Temp Silicone	1
12.	55-24482-000	Pipe, Engine Air Intake	1
13.	56-18875-004	Hose, Hump, Hi Temp Silicone	1
14.	53-16126-009	Clamp "T", Bolt 4.50"	1
15.	56-00031-005	Hose, Hump Reducer	1
16.	53-16126-005	Clamp, "T", Bolt 6"	1
17.	53-00308-007	Air Cleaner	1
	53-09798-000	Indicator, Air Restriction	1
18.	40-22414-001	Brkt, Air Cleaner Mtg	1
19.	42-18953-000	Brkt, Muffler Rear Mtg	1
	42-18954-000	Brkt, Muffler Fwd Mtg (N/S)	1


Engine Air Throttle System

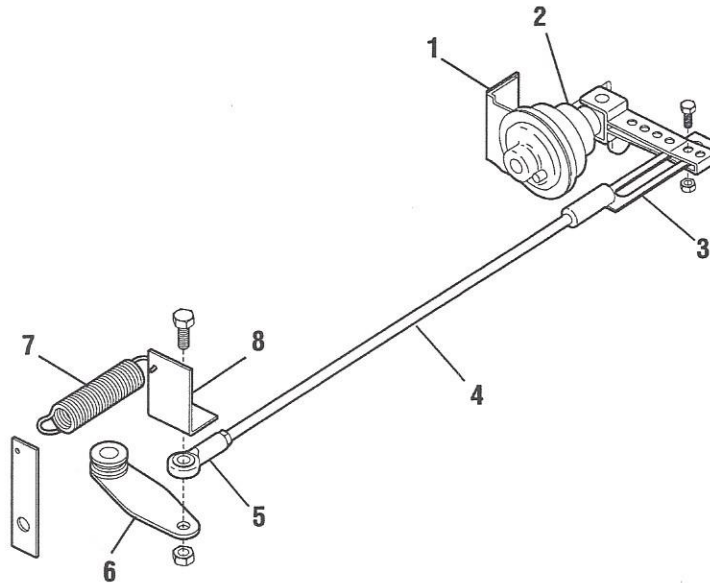

01-109-00

1.	40-24605-000	Brkt, Cylinder Mtg	1
2.	53-02260-000	Cylinder, Throttle	1
3.	42-24905-000	Link Asm, Throttle	1
4.	40-00793-022	Rod, Accelerator	1
5.	53-00412-003	End, Rod	1
6.	40-24387-000	Brkt, Spring Anchor	1
7.	53-24382-000	Spring, Return	1
8.	40-24386-000	Brkt, Spring Anchor	1


Oil Filter and Luberliner Mounting

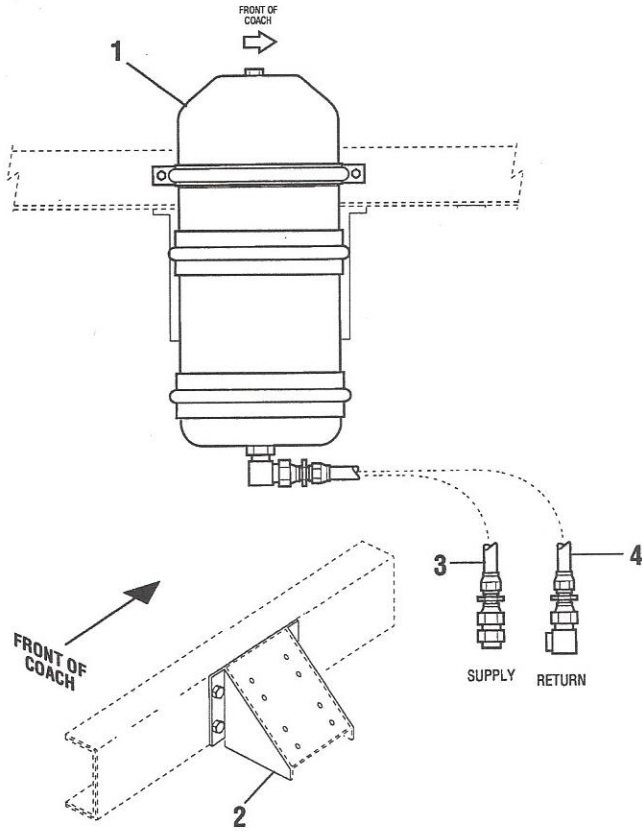

01-108-00

- | | | | |
|----|-----------------|--------------------------|---|
| 1. | 53-11916-001 | Luberliner | 1 |
| 2. | 42-24839-000 | Brkt Asm, Luberliner Mtg | 1 |
| 3. | 46-06D3030-0485 | Hose Asm, Supply | 1 |
| 4. | 46-06D3030-1025 | Hose Asm, Return | 1 |


Booster Pump Mount and Components

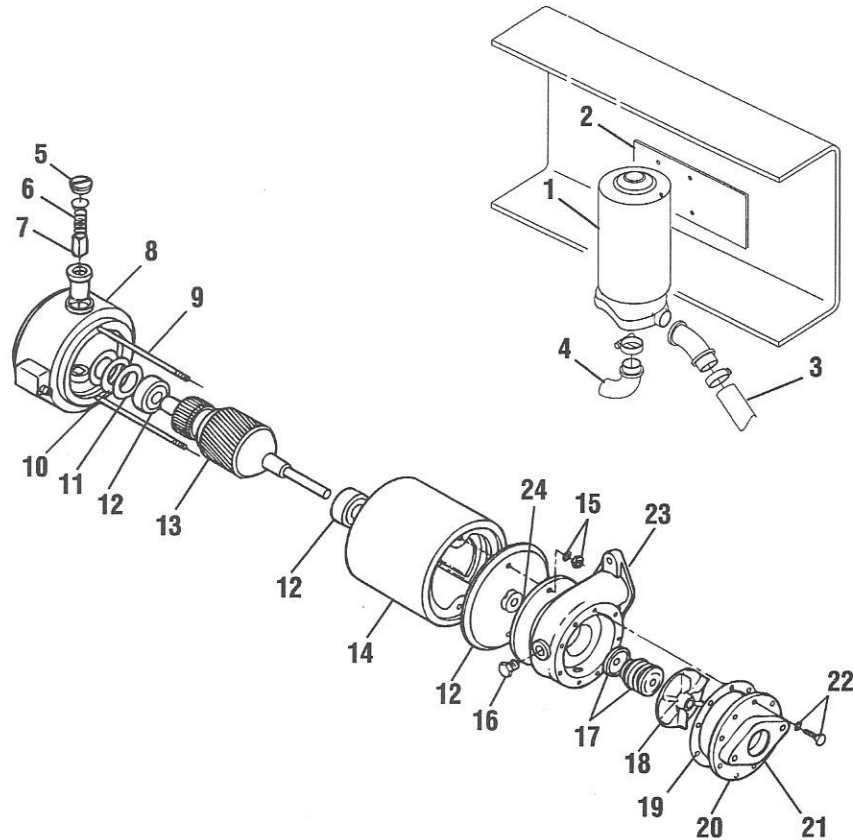

07-006-01

1.	53-02116-001	Pump Asm	1	82-11711-00	Flange Asm	1	
2.	40-24785-000	Brkt Asm, Booster Pump	1	22.	82-04226-001	Screw w/Washer	8
3.	56-17572-000	Hose, Special	1	23.	82-08473-000	Pump, Body	1
4.	53-00227-000	Connector, 90°	1	24.	82-04129-000	Slinger	1
5.	82-04227-003	Cap, Brush	2				
6.	82-01853-000	Brush Asm, w/Spring 12 VDC	2				
7.	82-01850-000	Tube, Brush	2				
8.	82-00408-000	Motor, 12 VDC	2				
9.	82-04167-000	Stud, Case	2				
10.	82-04128-000	Washer, Spring	1				
11.	82-04168-000	Washer, Thrust	1				
12.	82-08476-000	Bearing, Inc w/Armature	2				
13.	82-04254-000	Armature Asm, 12VDC	1				
14.	82-04226-009	Stator, 12 VDC	1				
15.	82-04226-002	Nut	2				
	82-04226-003	Lockwasher	2				
16.	82-04226-004	Plug, Drain 1/8" NPT	1				
17.	82-08475-000	Seal, Impeller	2				
18.	82-08475-003	Impeller	1				
19.	82-08477-000	Gasket, Cover	1				
20.	82-11711-000	Cover	1				
21.	82-04225-009	Flange Asm, 1" NPT (N/S)	1				

Chassis Frame

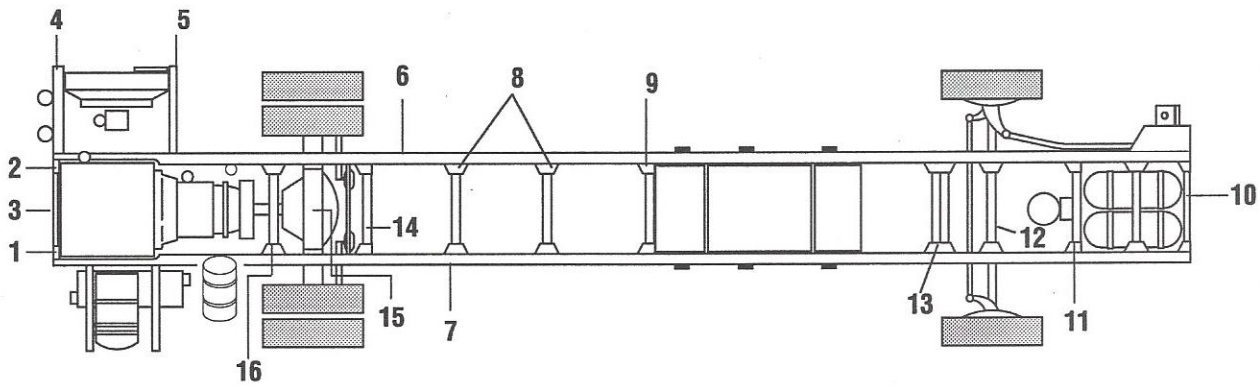

08-121-00

1.	42-22327-001	Brkt, RH Channel	1
2.	42-22327-000	Brkt, LH Channel	1
3.	40-22328-000	Channel, Rr Crossmember	1
4.	42-24414-000	Outrigger, Rr Radiator Mtg	1
5.	42-12160-000	Outrigger, Frt Radiator Mtg	1
6.	55-16468-019L	Frame Rail, Raised LH	1
	55-24353-001	Rail, LH Inner Reinforcement	1
7.	55-16468-019R	Frame Rail, Raised RH	1
	55-24353-001	Rail, RH Inner Reinforcement	1
8.	42-11174-001	Crossmember Asm	2
9.	55-09663-000	Crossmember Asm	1
10.	42-14972-000	Crossmember Asm	1
11.	42-14408-000	Crossmember Asm	1
12.	55-13440-000	Crossmember Asm	1
13.	55-13441-000	Crossmember Asm, Panhard Rod Mtg	1
14.	55-21825-000	Crossmember Asm	1
	40-21957-000	Spacer Rr Suspension	4
15.	55-21822-000	Crossmember Asm	1
	40-21957-000	Spacer Rr Suspension	4
16.	42-22016-000	Crossmember Asm	1