

# Index



# Index By Description

## A

Absorber, Shock	53-14005-000	3-3
Absorber, Shock	53-15085-029	3-2
Adapter Asm	82-09786-004	4-2
Adapter, Axle	53-16231-003	3-2
Adaptor	53-23335-000	7-1
Adaptor, Fan Mtg	55-00700-000	6-3
Adaptor, O-Ring Special	45-22726-000	7-1
Adjuster, Bearing	82-09678-004	6-6
Adjuster, Manual Slack	53-18094-000	4-1
Adjuster, Manual Slack	82-02164-000	4-3
Air Cleaner	53-00308-007	1-6
Air Dryer, 12VDC	53-16841-000	5-1
Air Dryer, 12VDC	53-16841-001	5-4
Air Dryer, 12VDC	53-16841-001	5-5
Air Tanks, Dual Chamber	55-18880-000	5-1
Air Tanks, Dual Chamber	55-18880-000	5-3
Alternator, 12V Delco	51-24192-000	1-1
Anchor, Coupling Elbow	53-09370-000	5-1
Angle, LH Charge Air Cleaner Mtg	40-18531-002	1-6
Angle, RH Charge Air Cleaner Mtg	40-18531-001	1-6
Angle, Swaybar Mtg	40-11537-000	3-3
Arm, LH Steering	82-03886-000	3-7
Arm, LH Tie Rod	82-11958-000	3-7
Arm, Pitman	53-23168-000	3-7
Arm, RH Tie Rod	82-11828-000	3-7
Armature Asm, 12VDC	82-04254-000	1-9
Axle Asm, F175 4.10	53-15942-006	3-2
Axle Asm, Rr RS17145 Stud	53-23149-001	2-4

## B

Backer, Speedo Pick-Up	82-03977-000	3-6
Ball	82-09653-001	6-6
Battery, 12V Heavy Duty	50-00201-000	7-4
Beam Asm, LH Load	82-09646-001	3-1
Beam Asm, RH Load	82-09646-002	3-1
Beam Asm, Torque 2.5"x18	82-09646-005	3-1
Beam Front Axle	53-14473-007	3-3
Beam, LH Equalizer	53-15085-001	3-2
Beam, RH Equalizer	53-15085-002	3-2
Bearing Pinion Roller	82-09771-002	3-4
Bearing, Cone	82-01106-000	3-4
Bearing, Cone	82-07949-005	3-9
Bearing, Cone	82-07953-002	3-9
Bearing, Cup	82-01105-000	3-4
Bearing, Cup	82-07949-006	3-9
Bearing, Cup	82-07953-001	3-9

Bearing, Inc w/Armature	82-08476-000	1-9
Bearing, Inner Cone	82-07958-005	3-10
Bearing, Inner Cup	82-07958-004	3-10
Bearing, Inner Cup	82-09052-000	3-4
Bearing, Inner Cup	82-09771-002	3-4
Bearing, King Pin Thrust	82-01723-000	3-6
Bearing, Outer Cone	82-04528-001	3-10
Bearing, Outer Cup	82-04528-000	3-10
Bearing, Outer Cup	82-09771-001	3-4
Bearing, Outer Cup	82-09771-003	3-4
Bearing, Roller	82-07949-008	3-9
Bearing, Roller	82-09649-004	6-5
Bearing, Roller	82-09672-009	6-5
Belt, 7 Rib	53-24727-000	1-1
Block, Fuse	51-19333-000	7-5
Block, Terminal 4-Prong	51-00108-005	7-2
Block, Terminal	51-21459-000	7-5
Body Asm, Chamber	82-06191-003	4-4
Body Asm, Motor	82-00494-000	6-3
Bolt Asm, Eccentric	82-09643-007	3-1
Bolt Metric, M16 X 110 MM Lg	54-17491-026	1-1
Bolt, Button Head .5"-13x1.75"	54-11199-001	3-3
Bolt, Carrier Mtg	82-07956-005	3-9
Bolt, Diff Cap	82-07951-006	3-9
Bolt, Diff Case	82-67953-007	3-9
Bolt, Drum Mtg	82-07957-002	3-10
Bolt, Hub to Drum	82-13018-000	3-5
Bolt, Hxhd 1-8x6" Gr 5	54-11334-019	3-1
Bolt, Hxhd 1.0"-12x4.50" Gr 8	54-11359-016	3-3
Bolt, Hxhd 1.5"-6x7" Gr 5	82-09643-001	3-1
Bolt, Hxhd 3/4"-10x3.50" Gr 5	54-11340-013	3-1
Bolt, Oil Scoop	82-07952-003	3-9
Bolt, Pinion Cage	82-07949-004	3-9
Bolt, Ring Gear	82-09764-005	3-4
Bolt, Side Cover	82-05683-000	6-5
Bolt, Spider Mtg	82-00156-000	4-3
Bolt, Spider Mtg	82-03200-000	4-1
Bolt, U-Joint Mtg	53-22644-002	2-4
Bolt, Valve Plug	82-09681-002	6-5
Boot, Dust	82-09635-003	4-2
Box Asm, Rr Run	42-22397-000	7-2
Brace, Radiator	40-10575-003	1-4
Brace, Trailing Arm Tower	40-17662-000	3-2
Breather Asm	82-02205-000	3-5
Breather Asm	82-07956-002	3-8
Brkt Asm, Air Dryer Support	40-22990-000	5-4
Brkt Asm, Air Dryer Support	40-22990-000	5-5
Brkt Asm, Booster Pump	40-24785-000	1-9
Brkt Asm, Engine Rr	55-24266-000	1-1
Brkt Asm, Fan Motor Mtg	42-22158-000	6-3
Brkt Asm, Fuel Tank	42-15997-000	1-3
Brkt Asm, Fuel Tank Mtg	42-15228-000	1-3
Brkt Asm, Hydraulic Pump Support	55-24303-000	6-2



Capcsrew	82-07956-005	3-8
Capcsrew, Special Head	82-00496-000	6-3
Capcsrew, Diff (Long)	82-09764-010	3-4
Capcsrew, Diff (Short)	82-09764-011	3-4
Capcsrew, Diff Cap	82-09764-002	3-4
Capcsrew, Diff Case	82-09764-008	3-4
Capcsrew, Pinion Cage	82-09777-007	3-4
Carrier Asm w/Cap	82-07951-001	3-9
Carrier Asm, RS17145 4.10	82-09782-410	3-4
Case Asm, Diff Case	82-09771-001	3-4
Case Asm, Diff w/Nest	82-10324-002	3-4
Case, Diff (Flange Half)	82-07956-004	3-9
Case, Diff (Plane Half)	82-07953-003	3-9
Center, Axle Beam	82-07928-000	3-6
Chamber Asm, LH Brake	53-23200-000	5-1
Chamber Asm, RH Brake (N/S)	53-23200-001	5-1
Chamber Asm, Upper	82-09786-002	4-2
Channel Asm, Cross	82-09644-008	3-1
Channel, Fan Motor	40-15174-000	6-3
Channel, Rr Crossmember	40-22328-000	1-10
Clamp Asm, Chamber	82-06191-004	4-4
Clamp Asm, Upper	82-09737-004	4-2
Clamp Asm,Lwr	82-09686-005	4-2
Clamp "T", Bolt 4.50"	53-16126-009	1-6
Clamp, 4"	53-02322-0002	1-5
Clamp, 5"	53-02322-001	1-5
Clamp, 5/8"	53-09007-000	1-4
Clamp, Constant Tension	53-21364-007	1-4
Clamp, Constant Tension	53-21364-012	1-4
Clamp, Constant Torque	53-18882-001	1-6
Clamp, Constant Torque	53-18882-002	1-6
Clamp, Constant Torque	53-18882-004	1-6
Clamp, Exhaust	54-00029-001	1-5
Clamp, Rod End	53-08727-000	3-3
Clamp, "T", Bolt 6"	53-16126-005	1-6
Column Asm, Tilt Tele Strg (N/S)	53-21256-000	3-7
Cone, Inner Wheel Bearing	82-09000-000	3-6
Cone, Inner Wheel Bearing	82-13015-000	3-5
Cone, Outer Wheel Bearing	82-04180-000	3-5
Cone, Outer Wheel Bearing	82-09027-000	3-6
Connector, 90o	53-00227-000	1-9
Cooler, Charge Air	53-18865-000	1-6
Cotter	82-07951-003	3-9
Cotter, Steering Arm	82-03886-001	3-7
Cotter, Steering Arm	82-11291-001	3-7
Cover	82-11711-000	1-9
Cover Asm, Chamber	82-06191-006	4-4
Cover Asm, Motor w/Flow Divider *	82-00491-000	6-3
Cover, Lug Nut	53-12710-003	3-5
Cover, Lug Nut	53-12710-003	3-6
Cover, Rr Hub	53-12710-002	3-5
Crossmember Asm	42-11174-001	1-10
Crossmember Asm	42-14408-000	1-10
Crossmember Asm	42-14972-000	1-10

Crossmember Asm	42-22016-000	1-10
Crossmember Asm	55-09663-000	1-10
Crossmember Asm	55-13440-000	1-10
Crossmember Asm	55-21822-000	1-10
Crossmember Asm	55-21825-000	1-10
Crossmember Asm, Panhard Rod Mtg	55-13441-000	1-10
Crossmember, Air Spring Mtg	55-15373-001	3-2
Cup, Inner Wheel Bearing	82-08997-000	3-6
Cup, Inner Wheel Bearingg	82-07958-004	3-5
Cup, Outer Wheel Bearing	82-09026-000	3-6
Cup, Outer Wheel Bearing	82-09028-000	3-5
Cylinder, Throttle	53-02260-000	1-7

## D

Damper, Driveline	53-15383-000	2-4
Decal "Use Dexron II"	59-18394-000	6-4
Decal, "Battery Switch"	59-09885-000	7-4
Decal, Brake Switces (Not shown)	59-16991-000	7-3
Decal, Rr Run Relay Mtg	59-21175-000	7-2
Diaphragm	82-06191-005	4-4
Diaphragm, Lwr	82-09786-006	4-2
Diaphragm, Upper	82-09786-003	4-2
Diff Asm, J175 4.10	82-11252-410	3-9
Dipstick, Hydraulic Reservoir	53-22412-001	6-4
Door Asm, Rr Run Box	42-22316-000	7-2
Dowel, Axle Stud	82-13013-000	3-5
Drag Link	53-23170-002	3-7
Driveline Asm, 1610 Series	53-22405-001	2-4
Drum, Brake 16.5X6	82-03915-000	3-6
Drum, Rr 6x16.5	82-07957-001	3-10
Drum, Rr Brake 16.5"x7"	82-13017-000	3-5
Dual, Temp Warning	51-23245-000	7-1

## E

Elbow, 90o	56-24594-000	1-4
Element, Hydraulic Fluid Filter	53-22412-002	6-4
End Asm, Drag Link	82-09730-000	3-7
End Asm, LH Tie Rod	82-02379-000	3-7
End Asm, LH Tie Rod	82-02380-000	3-7
End, Rod	53-00412-003	1-7
End, Rod w/LH Threads	50-10922-002	3-3
End, Rod w/RH Threads	50-10922-001	3-3
Engine Asm, Cat 3116, 250 HP	53-24625-000	1-1
Extension, Valve Stem	53-00777-001	3-5

**MOTOR HOME CHASSIS MHMS 3116**

**F**

Fan, 26" Dia	53-19523-001	6-3
Filter Asm, Trans	53-11639-000	2-1
Fit, Stop Screw	82-09693-002	6-6
Fitting, Air Manifold	55-00274-001	5-1
Fitting, Grease	82-00872-000	4-1
Fitting, Grease	82-00872-000	4-3
Fitting, Grease	82-09649-006	6-6
Flange Asm	82-11711-00	1-9
Flange Asm, 1" NPT (N/S)	82-04225-009	1-9
Flange, Comp, 1610 Series	53-00414-000	2-4
Frame Rail, Raised LH	55-16468-019L	1-10
Frame Rail, Raised RH	55-16468-019R	1-10
Freon Compressor	53-13807-001	1-1
Ftg, Blkhd 1/4 NPT x 3/4-16 SAE	54-13093-005	7-3
Fuse, 10 Amp	51-17529-005	7-5
Fuse, 100 Amp	51-19332-100	7-5
Fuse, 125 Amp	51-19332-125	7-5
Fuse, 200 Amp	51-19332-200	7-5

**G**

Gasket, Air Governor	56-00033-000	5-1
Gasket, Axle	82-04529-000	3-8
Gasket, Axle Shaft	82-03697-000	3-5
Gasket, Axle Shaft	82-04529-000	3-10
Gasket, Chamber Brkt	82-03501-000	4-1
Gasket, Chamber Brkt	82-03501-000	4-3
Gasket, Cover	82-08477-000	1-9
Gasket, Frt Hub Cap	82-03705-000	3-6
Gasket, King Pin Cap	82-13092-000	3-6
Gasket, Side Cover	82-09650-001	6-5
Gauge, Dipstick	53-02298-004	2-3
Gauge, Oil Press	51-14016-000	7-2
Gauge, Water Temp	51-14015-000	7-2
Gear Asm, Drive Shaft	82-04512-000	6-3
Gear Asm, Steering	53-21900-000	6-6
Gear Idler	82-04514-000	6-3
Gear Set J175 4.10	82-07954-410	3-9
Gear, Driven, 18-Tooth	53-00761-010	7-1
Gear, Pinion	82-09778-004	3-4
Gear, Side	82-09778-003	3-4
Gearset, RS17145 4.56	82-10324-001	3-4
Governor, Air Comp	53-00271-000	5-1
Guide, Ball Rtn Half	82-09153-002	6-6
Gusset, Panhard Crossmember	55-13442-000	3-3

**H**

Hanger Asm, Air Spring Mtg	82-09644-001	3-1
Hanger Asm, RH Air Spring Mtg	82-09644-002	3-1
Harness Asm Pressure Switch (N/S)	42-17019-000	7-4
Harness Asm, Chassis Front (N/S)	42-22025-000	7-4
Harness Asm, Engine	50-24995-000	7-4
Harness Asm, EPM Interface (N/S)	42-20657-000	7-4
Harness Asm, Shifter Unit	42-15746-000	2-2
Harness, Rr Run Box	42-22518-002	7-2
Heater Immersion Block (N/S)	53-16690-007	1-1
Holder, Fuse	50-22989-000	7-5
Horn, Warning	51-12096-000	7-2
Hose Asm	46-04A111-0470	5-2
Hose Asm	46-06A1010-2050	1-2
Hose Asm	46-06D3030-0140	1-2
Hose Asm	46-06D3030-0810	1-2
Hose Asm	46-06D3030-0860	1-2
Hose Asm	46-08A1110-2320	1-2
Hose Asm	46-08E116-0180	5-2
Hose Asm	46-12A1014-0160	6-1
Hose Asm	46-12A1014-0470	6-1
Hose Asm	46-12A1014-3180	5-2
Hose Asm	46-12C2022-0175	6-1
Hose Asm	46-12C2022-0860	6-1
Hose Asm	46-12D3030-0550	5-2
Hose Asm	46-16A1010-0160	2-1
Hose Asm	46-16A1010-0280	2-1
Hose Asm	46-16A1010-0285	2-1
Hose Asm	46-16A1014-0320	2-1
Hose Asm	46-20A1010-0740	6-1
Hose Asm, Pressure	46-08B1014-4870	6-1
Hose Asm, Return	46-06D3030-1025	1-8
Hose Asm, Return	46-10A1014-4070	6-1
Hose Asm, Supply	46-06D3030-0485	1-8
Hose, 5/8" Silicone	56-09014-018.00	1-4
Hose, 5/8" Silicone	56-09014-034.00	1-4
Hose, Drain	56-00513-20.00	1-2
Hose, Hi Temp Silicone	56-24485-000	1-6
Hose, Hump	56-00031-019	1-4
Hose, Hump Reducer	56-00031-005	1-6
Hose, Hump, Hi Temp Silicone	56-18875-001	1-6
Hose, Hump, Hi Temp Silicone	56-18875-003	1-6
Hose, Hump, Hi Temp Silicone	56-18875-004	1-6
Hose, Rubber	56-16734-000	1-4
Hose, Silicone	56-09021-004.00	1-4
Hose, Special	56-17572-000	1-9
Housing Asm, Lwr	82-09637-000	4-2
Housing Asm, Rr Axle	82-13010-000	3-5
Housing, Rear Axle	82-07956-001	3-8

Housing, Steering Gear	82-09649-001	6-5
Hsg, Valve & Bell Plug	82-09678-006	6-5
Hub Asm, Frt w/Cup (LH/RH)	82-13105-000	3-6
Hub Asm, w/o Studs	82-06606-000	3-5
Hub, Rr	82-07958-003	3-10
Hydraulic Pump, Belt Driven	55-15771-004	6-2

**I**

Impeller	82-08475-003	1-9
Indicator, Air Restriction	53-09798-000	1-6
Isolator Asm, Engine Mtg	53-24269-000	1-1

**K**

Key	82-07951-002	3-9
Key, Drive Shaft	82-01679-000	6-3
Key, Lwr Draw	82-07929-002	3-7
Key, Tie Rod/Steering Arm	82-03483-000	3-7
Key, Upr Draw	82-07929-001	3-7
Kit, 6" Brake Lining	82-06026-000	4-3
Kit, 7" Brake Lining	82-09742-000	4-1
Kit, Diff (Items 23,25,26,27&29)	82-09778-001	3-4
Kit, Diff Gears & Cross	82-07953-005	3-9
Kit, Motor Rebuild	82-09949-000	6-3
Kit, Pinion Shim	82-07950-000	3-9
Kit, Rear Suspension	53-23312-000	3-1
Kit, Ring Gear Bolt (Items 21&24)	82-09764-007	3-4
Kit, Seal *	82-09693-001	6-6
Kit, Shim	82-08749-002	3-4
Kit, Split Shim	82-09764-004	3-4
Kit, Trans Shifter	53-16762-000	2-2
Kit, Fuel Tank Fill	53-22802-000	1-3
Knuckle Asm, LH	82-07930-000	3-6
Knuckle Asm, RH	82-07930-001	3-6

**L**

Liner, Fuel Tank	55-07710-000	1-3
Liner, Fuel Tank Mtg	55-07709-000	1-3
Link Asm, Throttle	42-24905-000	1-7
Link, Height Control (N/S)	50-02345-003	3-1

Link, Leveling Valve	53-02345-0002	3-3
Locknut	82-03173-000	4-1
Locknut, Adjuster	82-09678-005	6-6
Locknut, Flex 1.25"-7 SPS	82-09643-002	3-1
Locknut, Nylok 1.0"-12 Gr 8	54-12551-014	3-3
Locknut, Nylok 1/2"-13 Gr 5	54-12540-009	3-1
Locknut, Nylok 3/4"-10 Gr 5	54-12540-012	3-1
Locknut, Ring Gear	82-09764-006	3-4
Locknut, Spider Mtg	82-03169-000	4-1
Locknut, Spider Mtg	82-03173-000	4-3
Lockpin, Adj Ring	82-13099-000	3-4
Lockring, Camshafet	82-03344-000	4-3
Lockring, Camshaft	82-03344-000	4-1
Lockring, Pinion	82-03330-000	3-4
Lockring, Pinion	82-07949-009	3-9
Lockwasher	82-04226-003	1-9
Lockwasher	82-04530-000	3-9
Lockwasher	82-07956-004	3-8
Lockwasher, 1.5" Int Tooth	82-09643-005	3-1
Lockwasher, Nylok 1-8 Gr 5	54-12540-014	3-1
Lockwasher, Wheel Bearing	82-07956-007	3-8
Lockwasher, Wheel Bearing Nut	82-13011-000	3-5
Luberfiner	53-11916-001	1-8

**M**

Manifold, Fitting	55-00334-000	7-1
Manifold, Temp Sender	55-17735-000	2-1
Manifold, Temp Sender	55-17735-000	7-1
Motor, 12 VDC	82-00408-000	1-9
Motor, Hydraulic Fan	55-14533-000	6-3
Mount, Vibration	55-02352-000	1-4
Mount, Vibration	56-09703-001	6-3
Mtg Asm, Frt Air Spring	82-09644-003	3-1
Muffler	53-24982-000	1-5

**N**

Nut	82-04226-002	1-9
Nut	82-04530-000	3-9
Nut	82-07957-003	3-10
Nut, Axle Stud	82-03172-000	3-5
Nut, Draw Key	82-03323-000	3-7
Nut, Hxhd 7/8"-14 Tall	82-09643-003	3-1
Nut, Hxhd Castle .75"-16	53-13109-002	3-3
Nut, Inner Wheel Bearing	82-03319-000	3-6

## MOTOR HOME CHASSIS MHMS 3116

Nut, Inner Wheel Bearing	82-03321-000	3-5
Nut, Inner Wheel Bearing	82-07956-006	3-8
Nut, Jam	82-09650-003	3-9
Nut, LH Inner	53-12450-001	3-10
Nut, LH Inner Wheel	53-20652-000	3-5
Nut, LH Inner Wheel	53-20652-000	3-6
Nut, LH Outer	53-13895-002	3-10
Nut, LH Outer Wheel	53-13895-002	3-5
Nut, LH Outer Wheel	53-13895-002	3-6
Nut, Outer Wheel Bearing	82-03308-000	3-5
Nut, Outer Wheel Bearing	82-07933-001	3-6
Nut, Pinion	82-07949-001	3-9
Nut, Pinion	82-09764-009	3-4
Nut, RH Inner	53-12450-002	3-10
Nut, RH Inner Wheel	53-20653-000	3-5
Nut, RH Inner Wheel	53-20653-000	3-6
Nut, RH Outer	53-13895-001	3-10
Nut, RH Outer Wheel	53-13895-001	3-5
Nut, RH Outer Wheel	53-13895-001	3-6
Nut, Steering Arm	82-03458-000	3-7
Nut, Stop Screw	82-07929-004	3-6
Nut, Tie Rod Arm	82-11291-000	3-7
Nut, Jam	82-09682-003	6-5

## O

O-Ring	82-09653-007	6-6
O-Ring	82-09678-003	6-5
O-Ring, Relief Valve	82-09681-009	6-5
O-Ring, Seal	82-09678-007	6-5
Oil Cooler Asm	53-18835-000	6-1
Oil Cooler Trans	53-11959-000	1-4
Outrigger, Frt Radiator Mtg	42-12160-000	1-10
Outrigger, Rr Radiator Mtg	42-24414-000	1-10

## P

Pad, Rubber	53-15085-005	3-2
Panel, Rr Run Relay Mtg	40-21788-004	7-2
Panel, Switch	40-16984-000	7-3
Panhard Rod Asm, Adj	53-20116-002	3-3
Pin, Brake Shoe Anchor	82-03455-000	4-1
Pin, Brake Shoe Anchor	82-03455-000	4-3
Pin, Dowel	82-00492-000	6-3
Pin, Knuckle (king Pin)	82-03869-000	3-6
Pin, Shoe Retainer	82-03283-000	4-1

Pin, Shoe Retainer	82-03283-000	4-3
Pipe Asm, Exhaust	55-24516-000	1-5
Pipe Asm, Turbo Outlet	55-24552-000	1-5
Pipe, Charge Air Cleaner Inlet	55-24483-000	1-6
Pipe, Charge Air Cooler Outlet	55-24484-000	1-6
Pipe, Engine Air Intake	55-24482-000	1-6
Pipe, Engine Inlet	55-24417-000	1-4
Pipe, Exhaust Tail	55-24553-000	1-5
Pipe, Radiator Inlet	55-24418-000	1-4
Pipe, Radiator Outlet	55-24416-000	1-4
Piston Asm, Rack	82-09653-005	6-5
Piston, Rack	82-09653-006	6-5
Plate Asm, U-Bolt Spacer	82-09642-003	3-1
Plate, Air Spring Mtg	40-11652-000	3-3
Plate, Clamping	82-09646-004	3-1
Plate, Cut Off Switch Mtg	40-24840-000	7-5
Plate, Fuel/Water Sep Mtg	40-22330-001	1-2
Plate, Gear	82-00493-000	6-3
Plate, Hydraulic Pump Mtg	55-24304-000	6-2
Plate, Locking	82-09642-005	3-1
Plate, Lwr Air Spring Mtg	40-08450-000	3-3
Plate, Panhard Rod Backing	55-13444-000	3-3
Plate, Relay Valve Mtg	40-21884-000	5-1
Plate, Rotor	82-13106-000	3-6
Plug	82-07956-003	3-8
Plug, 1/2"	53-00356-002	7-2
Plug, Bleed	82-09682-002	6-6
Plug, Drain 1/8" NPT	82-04226-004	1-9
Plug, Hub	82-13021-000	3-5
Plug, Magnetic Drain	82-03452-000	3-5
Plug, Oil Fill	82-03189-000	3-5
Plug, Release Stud	82-09634-001	4-2
Plug, Side Cover Vent	82-05786-000	6-5
Poppet	82-09672-004	6-5
Probe, Liquid Level	53-02351-000	7-4
Protector, Wheel Guard	53-23959-000	3-5
Protector, Wheel Guard	53-23959-001	3-5
Pulley, Hydraulic Pump	55-23022-000	6-2
Pulse Generator	53-12086-000	7-1
Pump Asm	53-02116-001	1-9
Pump, Body	82-08473-000	1-9

## R

Radiator	53-18056-000	1-4
Radius Rod Asm, Adj Lower	53-20116-001	3-3
Rail, LH Inner Reinforcement	55-24353-001	1-10
Rail, RH Inner Reinforcement	55-24353-001	1-10
Rear Brake Chamber	53-23317-000	5-1



Relay, 12V	51-00068-000	7-5
Reservoir Asm, Hydraulic	53-22412-000	6-4
Retainer, Adj Screw	82-05799-000	6-5
Retainer, Roller	82-03871-000	4-1
Retainer, Roller	82-03871-000	4-3
Ring, Adjusting	82-07951-004	3-9
Ring, Bearing Adj	82-09777-006	3-4
Ring, Piston Seal	82-09653-008	6-6
Ring, Retainer	82-09681-001	6-5
Ring, Retaining	82-09649-003	6-5
Ring, Seal	82-09672-007	6-5
Ring, Seal	82-09678-002	6-5
Ring, Seal	82-09678-008	6-5
Ring, Valve Hsg Seal	82-09681-006	6-5
Rivet, Ring Gear	82-07952-006	3-9
Rod Asm, Push	82-06191-001	4-4
Rod Asm, Push	82-09786-007	4-2
Rod End, LH w/ Clamp & Bushing	82-09646-009	3-1
Rod End, RH w/ Clamp & Bushing	82-09646-008	3-1
Rod, Accelerator	40-00793-022	1-7
Rod, Spacer	82-09672-001	6-5
Roller, Brake Shoe	82-03504-000	4-1
Roller, Brake Shoe	82-03504-000	4-3

**S**

Saddle, Isolator Mtg	53-09943-000	3-3
Scoop, Oil	82-07952-001	3-9
Screw w/Washer	82-04226-001	1-9
Screw, Cam Brkt	82-00155-000	4-1
Screw, Cam Brkt	82-00194-000	4-3
Screw, Centering Stop	82-07929-003	3-6
Screw, Hub Cap	82-03210-000	3-6
Screw, King Pin Cap	82-00873-000	3-6
Screw, Poppet Stop	82-09681-004	6-5
Screw, Shaft Adj	82-05682-000	6-5
Screw, Torx	82-00476-000	6-6
Sdider Asm, Rr Brake LH/RH	82-13027-000	4-1
Seal Asm, Inner Wheel	82-02243-000	3-5
Seal Asm, Lwr King Pin	82-02210-000	3-6
Seal Asm, Frt Wheel Bearing	82-02223-000	3-6
Seal, Camshaft	82-02241-000	4-1
Seal, Camshaft	82-02241-000	4-3
Seal, Dirt	82-09649-005	6-5
Seal, Dust	82-09783-002	2-4
Seal, Guide Cap	82-09653-003	6-6
Seal, Impeller	82-08475-000	1-9
Seal, Inner Wheel	82-04523-002	3-10
Seal, Input Shaft	82-09678-009	6-5

Seal, Input Shaft Dirt	82-09672-006	6-5
Seal, Output	82-09649-002	6-5
Seal, Pinion	82-01125-000	3-4
Seal, Pinion	82-07949-003	3-9
Seal, Trunnion Dirt/Water	82-09681-003	6-5
Seal, Upper King Pin	82-11037-000	3-6
Seal, Valve Hsg	82-09681-005	6-5
Sender, Oil Pressure Gauge	51-12718-000	7-1
Sender, Oil Pressure Gauge Rr	51-00098-000	7-1
Sender, Temp	51-12717-000	7-1
Sensor Asm, Speedo	82-02157-000	3-6
Separator, Fuel/Water	53-24744-001	1-1
Shaft Asm, Input Worm Valve	82-09650-004	6-5
Shaft, Axle	82-07956-008	3-8
Shaft, Interm Strg (N/S)	53-21260-001	3-7
Shaft, LH Axle	82-13012-000	3-5
Shaft, RH Axle (N/S)	82-13012-001	3-5
Shaft, Sector	82-09650-002	6-5
Shaft, Slip Yoke	82-09783-003	2-4
Shaft, Stub Yoke	82-09783-001	2-4
Shaft, Worm	82-09650-005	6-5
Shield Dust	82-13020-000	3-5
Shim, King Pin 0.005"	82-03633-000	3-6
Shim, King Pin 1.010"	82-03624-000	3-6
Shim, Pinion 0.10"	82-07955-002	3-9
Shim, Pinion 0.30"	82-07955-003	3-9
Shim, Pinion 0.50"	82-07955-001	3-9
Shock Absorber	82-04113-000	3-1
Shoe Asm, Frt Brake	82-02406-000	4-3
Shoe Asm, Rr Brake	82-13024-002	4-1
Shroud, Fan	43-18100-000	1-4
Sleeve Asm, Poppet	82-09672-005	6-5
Slinger	82-04129-000	1-9
Slinger, Oil	82-13014-000	3-5
Slinger, RH Oil	82-11377-000	3-6
Slinger/Rotor Asm, LH Oil	82-11985-000	3-6
Spacer	40-12311-000	7-5
Spacer Rr Suspension	40-21957-000	1-10
Spacer Rr Suspension	40-21957-000	1-10
Spacer, Air Spring Mtg	40-17620-001	3-3
Spacer, Panhard Rod Brkt	55-13445-000	3-3
Spacer, Torque Rod	40-21871-000	3-3
Spider	82-03944-000	3-4
Spider Asm, LH Frt	82-07932-002	4-3
Spider Asm, LH Frt w/Seal	82-02392-000	4-3
Spider Asm, RH Frt	82-02393-002	4-3
Spider Asm, RH Frt w/Seal	82-02393-000	4-3
Spring Air	53-14006-000	3-3
Spring Asm, Air	53-15085-028	3-2
Spring Asm, Air	82-09642-001	3-1
Spring, Element Retainer	82-00536-002	6-4
Spring, Poppet	82-09672-002	6-5
Spring, Return	53-24382-000	1-7

**MOTOR HOME CHASSIS MHMS 3116**

Spring, Return	82-06191-002	4-4	Tires, 9R22.5 XZA	M101	3-6
Spring, Service Rtn	82-09637-003	4-2	Torque Rod Asm, 18"	82-09646-003	3-1
Spring, Shoe Retainer	82-03835-000	4-1	Tower, LH Torque Rod	55-14820-000	3-3
Spring, Shoe Retainer	82-03835-000	4-3	Tower, RH Torque Rod	55-14819-000	3-3
Spring, Shoe Retainer	82-03837-000	4-1	Transmission Asm, Mt643	53-24184-000	2-4
Spring, Shoe Retainer	82-03837-000	4-3	Tube Asm, Engine Oil Fill	55-24719-000	1-1
Starter Asm, 12V	53-19322-006	1-1	Tube, Brush	82-01850-000	1-9
Stator, 12 VDC	82-04226-009	1-9	Tube, Dipstick	53-07693-001	2-3
Stem, Tire Valve	52-00771-000	3-5	Tube, Push	82-09672-003	6-5
Stem, Tire Valve	52-00771-000	3-6	Tube, Upper Radius Rod	55-11196-001	3-3
Stem, Tire Valve	53-22578-002	3-5	Tubing, Nylon Black	56-14036-000	5-2
Strap, Fuel Tank Mtg	55-07708-000	1-3	Tubing, Nylon Black	56-14037-000	5-2
Strap, U-Joint Mtg	53-22644-001	2-4	Tubing, Nylon Brown	56-14053-000	5-2
Stud Asm, Release	82-09786-001	4-2	Tubing, Nylon Brown	56-14054-000	5-2
Stud Axle Flange (LH & RH)	82-13016-000	3-5	Tubing, Nylon Brown	56-21888-000	5-2
Stud, Axle Shaft	82-07958-001	3-10	Tubing, Nylon Green	56-14049-000	5-2
Stud, Case	82-04167-000	1-9	Tubing, Nylon Green	56-14050-000	5-2
Stud, LH Inner Wheel	82-13016-001	3-5	Tubing, Nylon Green	56-14051-000	5-2
Stud, LH Wheel	82-07958-002	3-10	Tubing, Nylon Green	56-14052-000	5-2
Stud, RH Inner Wheel (N/S)	82-13016-002	3-5	Tubing, Nylon Orange	56-21887-000	5-2
Support Asm, Air Spring	42-11220-000	3-3	Tubing, Nylon Red	56-14040-000	5-2
Support Asm, Driveline Guard	42-10153-000	2-4	Tubing, Nylon Red	56-14041-000	5-2
Support Asm, Frt Engine	55-24264-000	1-1	Tubing, Nylon Red	56-21886-000	5-2
Sway Asm, RH Load	82-09646-004	3-1	Tubing, Nylon Silver	56-14056-000	5-2
Swaybar Asm	55-14336-000	3-3			
Switch Asm, Neutral Start	51-17178-000	7-1			
Switch, Back-Up Lamp	51-00217-000	7-1			
Switch, Battery Cutoff	51-00101-000	7-4			
Switch, Brake Light	51-00072-000	7-3			
Switch, Cut Off	51-12244-000	7-5			
Switch, Dual Temp Warning	51-23245-000	6-3			
Switch, Low Air Press	51-00160-004	5-1			
Switch, Low Air Pressure	51-00160-004	7-3			
Switch, Low Oil Press Light	51-02339-001	7-1			
Switch, Starter Push Button	51-00100-000	7-2			
Switch, Stoplight	51-00072-000	5-1			
Switch, Temp 2200	51-19127-220	7-1			
Switch, Toggle DPST Sealed	51-02164-021	7-2			
Switch, Toggle SPDT Sealed	51-02164-022	7-2			
Switch, Toggle SPDT Sealed	51-02164-023	7-2			

**U**

U-Bolt, 7/8"-14x4 11/16x11 1/2"	82-09642-002	3-1
U-Bolt, Axle Mtg	53-15085-016	3-2
U-Bolt, Driveline Guard	55-10031-000	2-4
U-Joint, Cross Kit (Special)	82-09783-004	2-4
U-Joint, Cross Kit, 1610 Series	82-06871-000	2-4

**V**

V-Belt	53-02222-060	1-1
Valve, Air Protection	53-15022-002	5-1
Valve, Air Tank Drain 1/4"	53-20873-000	5-1
Valve, Bleeder	53-09054-000	1-4
Valve, Brake E-6	53-00466-000	5-1
Valve, Brake Relay R12	51-10356-000	5-1
Valve, Brake Relay R14	53-11924-000	5-1
Valve, Double Check	50-20338-000	5-1
Valve, Fan Motor Control	53-15851-008	6-3
Valve, Height Control	53-02125-001	3-3
Valve, Leveling w/Rod	53-19771-010	3-1

**T**

Tang, Drive	53-23335-001	7-1
Tang, Signal Gen Drive	53-02051-000	7-1
Tank Asm, Fuel	53-22004-000	1-3
Tape, Adhesive 1.0"	56-02138-000	5-3
Tie Rod Asm w/Clamps	82-00104-002	3-7
Tires, 9R22.5 XZA	M101	3-5

Valve, Parking Brake Control	53-00758-001	5-1
Valve, Press Control	53-00319-000	5-1
Valve, Quick Release QR-1	53-21580-000	5-1
Valve, Roller	82-09682-001	6-5
Valve, Safety	73-00276-000	5-1
Valve, Single Check 1/2"	53-21756-000	5-1
Valve, Spring Brake Control	53-00467-000	5-1
Valve, Threadle	53-08210-000	5-1
Vent, Fuel Tank	53-21370-000	1-3

## W

Washer	55-14623-000	3-3
Washer	55-14623-000	3-3
Washer	82-00489-000	6-3
Washer	82-03407-000	3-4
Washer	82-04531-000	3-10
Washer	82-07951-005	3-9
Washer	82-07952-002	3-9
Washer	82-08162-005	3-4
Washer	82-07949-002	3-9
Washer, 1.50" Flat	82-09643-006	3-1
Washer, 7/8" Flat A-325	82-09643-008	3-1
Washer, Anti-Turn	82-03337-000	3-5
Washer, Axle Stud	82-09643-004	3-1
Washer, Bearing	82-03357-000	3-6
Washer, Bearing Jam Nut	82-03417-000	4-1
Washer, Cam Brkt	82-03417-000	4-3
Washer, Cam Brkt	41-00035-008	1-4
Washer, Flat	41-00035-011	1-4
Washer, Flat	82-04477-000	4-1
Washer, Flat	82-04477-000	4-3
Washer, Flat	82-13023-000	4-1
Washer, Flat, Hard	54-12601-012	1-1
Washer, Hard Flat	54-12601-012	3-3
Washer, Hub Cap	82-03348-000	3-6
Washer, Inner Spacer	82-03356-000	4-1
Washer, Inner Spacer	82-03356-000	4-3
Washer, King Pin Cap	82-03348-000	3-6
Washer, Outer Spacer	82-03396-000	4-1
Washer, Outer Spacer	82-03396-000	4-3
Washer, Pierced	82-03353-000	3-6
Washer, Retainer	82-00536-003	6-4
Washer, Shock	53-14623-002	3-3
Washer, Spacer	82-03379-000	4-3
Washer, Spacer	82-09649-007	6-5
Washer, Spacing	82-03379-000	4-1
Washer, Spring	82-04128-000	1-9
Washer, Stop Screw	82-09681-007	6-5

Washer, Thrust (Pinion Gear)	82-03388-000	3-4
Washer, Thrust (side Gear)	82-09778-002	3-4
Washer, Thrust (Thin)	82-09678-001	6-5
Washer, Thrust	82-04168-000	1-9
Washer, Trust (Thick)	82-09672-008	6-5
Washers	82-07956-004	3-9
Weight, Wheel *	53-13894-XXX	3-5
Wheel, Alum (Polish Disk)	50-11851-002	3-5
Wheel, Alum (Polish Disk)	50-11851-002	3-6
Wheel, Alum (Polish Disk)	50-11851-003	3-5
Wheel, Alum (Polish Disk)	50-11851-003	3-6
Wheel, Steel	50-11856-000	3-5
Wingnut, Reservoir	82-00536-000	6-4
Wrap, Rubber	53-15085-005	3-2

## Y

Yoke Diff, 1610 Series	82-09778-005	2-4
Yoke, Diff 1610 Series	82-09778-005	3-4
Yoke, Flange, 1610 Series	82-06874-002	2-4



# Index By Part Number

## 40

40-00793-022	Rod, Accelerator	1-7
40-08450-000	Plate, Lwr Air Spring Mtg	3-3
40-10575-003	Brace, Radiator	1-4
40-11522-003	Brkt, Height Control Valve	3-3
40-11537-000	Angle, Swaybar Mtg	3-3
40-11652-000	Plate, Air Spring Mtg	3-3
40-12311-000	Spacer	7-5
40-15174-000	Channel, Fan Motor 6-3	
40-15229-001	Brkt LH, Fuel Tank Stop (N/S)	1-3
40-16984-000	Brkt, Switch Mtg	5-1
40-16984-000	Panel, Switch	7-3
40-17620-001	Spacer, Air Spring Mtg	3-3
40-17662-000	Brace, Trailing Arm Tower	3-2
40-17790-001	Brkt, LH Leveling Valve (N/S)	3-1
40-17790-001	Brkt, RH Leveling Valve (N/S)	3-1
40-18507-000	Brkt, Radiator Support	1-4
40-18531-001	Angle, RH Charge Air Cleaner Mtg	1-6
40-18531-002	Angle, LH Charge Air Cleaner Mtg	1-6
40-19424-000	Brkt, Bulkhead Fitting	5-1
40-19569-000	Brkt, Temp Sender	7-1
40-19739-000	Brkt, Level Valve Anchor (Welded)	3-1
40-20907-000	Brkt, Leveling Valve Link (N/S)	3-1
40-21517-001	Buss Bar	7-5
40-21531-000	Brkt, Relay Valve Mtg	5-1
40-21604-000	Buss Bar, 4-Prong Terminal Block	7-2
40-21788-004	Panel, Rr Run Relay Mtg	7-2
40-21871-000	Spacer, Torque Rod	3-3
40-21884-000	Plate, Relay Valve Mtg	5-1
40-21957-000	Spacer Rr Suspension	1-10
40-21957-000	Spacer Rr Suspension	1-10
40-22328-000	Channel, Rr Crossmember	1-10
40-22330-001	Plate, Fuel/Water Sep Mtg	1-2
40-22414-001	Brkt, Air Cleaner Mtg	1-6
40-22990-000	Brkt Asm, Air Dryer Support	5-4
40-22990-000	Brkt Asm, Air Dryer Support	5-5
40-22991-000	Brkt, Lower Air Dryer Support	5-4
40-22991-000	Brkt, Lower Air Dryer Support	5-5
40-23579-000	Brkt, Leveling Link, LH (N/S)	3-1
40-23579-000R	Brkt, Leveling Link, RH (N/S)	3-1
40-23581-000	Brkt, Leveling Valve Mtg	3-1
40-24386-000	Brkt, Spring Anchor	1-7
40-24387-000	Brkt, Spring Anchor	1-7
40-24550-000	Brkt, Standoff	2-3
40-24556-000	Brkt, Exhaust Support	1-5
40-24605-000	Brkt, Cylinder Mtg	1-7
40-24700-000	Brkt, Steering Gear	6-6
40-24785-000	Brkt Asm, Booster Pump	1-9
40-24840-000	Plate, Cut Off Switch Mtg	7-5
40-25011-000	Brkt, Trans Filter Mg	2-1

## 41

41-00035-008	Washer, Flat	1-4
41-00035-011	Washer, Flat	1-4

## 42

42-10153-000	Support Asm, Driveline Guard	2-4
42-11174-001	Crossmember Asm	1-10
42-11220-000	Support Asm, Air Spring	3-3
42-11535-000	Brkt, Swaybar Mtg	3-3
42-12160-000	Outrigger, Frt Radiator Mtg	1-10
42-14408-000	Crossmember Asm	1-10
42-14972-000	Crossmember Asm	1-10
42-15228-000	Brkt Asm, Fuel Tank Mtg	1-3
42-15746-000	Harness Asm, Shifter Unit	2-2
42-15997-000	Brkt Asm, Fuel Tank	1-3
42-16501-000	Brkt, Hydraulic Res Mtg	6-4
42-17019-000	Harness Asm Pressure Switch (N/S)	7-4
42-17740-000	Brkt, Central Air Tank	5-3
42-18131-000	Brkt Asm, Oil Cooler 6-1	
42-18514-000	Brkt, Rr Radiator Support	1-4
42-18953-000	Brkt, Muffler Rear Mtg	1-6
42-18954-000	Brkt, Muffler Fwd Mtg (N/S)	1-6
42-20657-000	Harness Asm, EPM Interface (N/S)	7-4
42-22016-000	Crossmember Asm	1-10
42-22025-000	Harness Asm, Chassis Front (N/S)	7-4
42-22158-000	Brkt Asm, Fan Motor Mtg	6-3
42-22316-000	Door Asm, Rr Run Box	7-2
42-22327-000	Brkt, LH Channel	1-10
42-22327-001	Brkt, RH Channel	1-10
42-22397-000	Box Asm, Rr Run	7-2
42-22518-002	Harness, Rr Run Box	7-2
42-24414-000	Outrigger, Rr Radiator Mtg	1-10
42-24415-000	Brkt Asm, Oil	1-4
42-24695-000	Brkt Asm, Steering Gear LH	6-6
42-24695-001	Brkt Asm, Steering Gear RH	6-6
42-24839-000	Brkt Asm, Lubefiner Mtg	1-8
42-24905-000	Link Asm, Throttle	1-7
42-24916-000	Brkt, Muffler Mtg	1-5
42-24992-000	Brkt Asm, Manifold Mtg	2-1

# 43

43-18100-000 Shroud, Fan 1-4

50-11856-000 Wheel, Steel 3-5  
 50-11948-003 Cable Asm, Battery 180" Red 7-4  
 50-11948-004 Cable Asm, Battery 180" Black 7-4  
 50-14382-010 Cable Asm, Black 2 Gauge 7-4  
 50-20338-000 Valve, Double Check 5-1  
 50-22989-000 Holder, Fuse 7-5  
 50-24377-000 Cable w/ Diode Asm 1-1  
 50-24995-000 Harness Asm, Engine 7-4

# 45

45-22726-000 Adaptor, O-Ring Special 7-1  
 46-04A1111-0470 Hose Asm 5-2  
 46-06A1010-2050 Hose Asm 1-2  
 46-06D3030-0140 Hose Asm 1-2  
 46-06D3030-0485 Hose Asm, Supply 1-8  
 46-06D3030-0810 Hose Asm 1-2  
 46-06D3030-0860 Hose Asm 1-2  
 46-06D3030-1025 Hose Asm, Return 1-8  
 46-08A1110-2320 Hose Asm 1-2  
 46-08B1014-4870 Hose Asm, Pressure 6-1  
 46-08E116-0180 Hose Asm 5-2  
 46-10A1014-4070 Hose Asm, Return 6-1  
 46-12A1014-0160 Hose Asm 6-1  
 46-12A1014-0470 Hose Asm 6-1  
 46-12A1014-3180 Hose Asm 5-2  
 46-12C2022-0175 Hose Asm 6-1  
 46-12C2022-0860 Hose Asm 6-1  
 46-12D3030-0550 Hose Asm 5-2  
 46-16A1010-0160 Hose Asm 2-1  
 46-16A1010-0280 Hose Asm 2-1  
 46-16A1010-0285 Hose Asm 6-1  
 46-16A1014-0320 Hose Asm 2-1  
 46-20A1010-0740 Hose Asm 6-1

# 51

51-00068-000 Relay, 12V 7-5  
 51-00072-000 Switch, Brake Light 7-3  
 51-00072-000 Switch, Stoplight 5-1  
 51-00098-000 Sender, Oil Pressure Gauge Rr 7-1  
 51-00100-000 Switch, Starter Push Button 7-2  
 51-00101-000 Switch, Battery Cutoff 7-4  
 51-00108-005 Block, Terminal 4-Prong 7-2  
 51-00160-004 Switch, Low Air Press 5-1  
 51-00160-004 Switch, Low Air Pressure 7-3  
 51-00217-000 Switch, Back-Up Lamp 7-1  
 51-02164-021 Switch, Toggle DPST Sealed 7-2  
 51-02164-022 Switch, Toggle SPDT Sealed 7-2  
 51-02164-023 Switch, Toggle SPDT Sealed 7-2  
 51-02339-001 Switch, Low Oil Press Light 7-1  
 51-10141-000 Cap, Rubber 7-2  
 51-10356-000 Valve, Brake Relay R12 5-1  
 51-12096-000 Horn, Warning 7-2  
 51-12244-000 Switch, Cut Off 7-5  
 51-12717-000 Sender, Temp 7-1  
 51-12718-000 Sender, Oil Pressure Gauge 7-1  
 51-14015-000 Gauge, Water Temp 7-2  
 51-14016-000 Gauge, Oil Press 7-2  
 51-17178-000 Switch Asm, Neutral Start 7-1  
 51-17529-005 Fuse, 10 Amp 7-5  
 51-19127-220 Switch, Temp 220<sup>0</sup> 7-1  
 51-19332-100 Fuse, 100 Amp 7-5  
 51-19332-125 Fuse, 125 Amp 7-5  
 51-19332-200 Fuse, 200 Amp 7-5  
 51-19333-000 Block, Fuse 7-5  
 51-21459-000 Block, Terminal 7-5  
 51-23245-000 Dual, Temp Warning 7-1  
 51-23245-000 Switch, Dual Temp Warning 6-3  
 51-24192-000 Alternator, 12V Delco 1-1

# 51

50-00201-000 Battery, 12V Heavy Duty 7-4  
 50-02345-003 Link, Height Control (N/S) 3-1  
 50-10922-001 End, Rod w/RH Threads 3-3  
 50-10922-002 End, Rod w/LH Threads 3-3  
 50-11822-026 Cable Asm, Ground 7-4  
 50-11822-028 Cable Asm, Power 7-4  
 50-11851-002 Wheel, Alum (Polish Disk) 3-5  
 50-11851-002 Wheel, Alum (Polish Disk) 3-6  
 50-11851-003 Wheel, Alum (Polish Disk) 3-5  
 50-11851-003 Wheel, Alum (Polish Disk) 3-6

# 52

52-00771-000 Stem, Tire Valve 3-5  
 52-00771-000 Stem, Tire Valve 3-6

## 53

53-00227-000	Connector, 90°	1-9	53-13895-002	Nut, LH Outer Wheel	3-6
53-00271-000	Governor, Air Comp	5-1	53-14005-000	Absorber, Shock	3-3
53-00276-000	Valve, Safety 5-1		53-14006-000	Spring Air	3-3
53-00308-007	Air Cleaner	1-6	53-14203-000	Brkt, RH Shock Mtg	3-3
53-00319-000	Valve, Press Control	5-1	53-14473-007	Beam Front Axle	3-3
53-00356-002	Plug, 1/2"	7-2	53-14623-002	Washer, Shock	3-3
53-00412-003	End, Rod	1-7	53-15022-002	Valve, Air Protection	5-1
53-00414-000	Flange, Comp, 1610 Series	2-4	53-15085-000	Brkt Asm, RH Frame	3-2
53-00466-000	Valve, Brake E-6	5-1	53-15085-001	Beam, LH Equalizer	3-2
53-00467-000	Valve, Spring Brake Control	5-1	53-15085-002	Beam, RH Equalizer	3-2
53-00758-001	Valve, Parking Brake Control	5-1	53-15085-005	Pad, Rubber 3-2	
53-00761-010	Gear, Driven, 18-Tooth	7-1	53-15085-005	Wrap, Rubber	3-2
53-00777-001	Extension, Valve Stem	3-5	53-15085-007	Brkt Asm, LH Frame	3-2
53-02051-000	Tang, Signal Gen Drive	7-1	53-15085-013	Brkt, Shock Absorber	3-2
53-02113-000	Quick, Disconnect	5-1	53-15085-016	U-Bolt, Axle Mtg	3-2
53-02116-001	Pump Asm	1-9	53-15085-028	Spring Asm, Air	3-2
53-02125-001	Valve, Height Control	3-3	53-15085-029	Absorber, Shock	3-2
53-02222-060	V-Belt	1-1	53-15085-030	Bushing, Equalizer Arm	3-2
53-02260-000	Cylinder, Throttle	1-7	53-15383-000	Damper, Driveline	2-4
53-02298-004	Gauge, Dipstick	2-3	53-15440-000	Brkt, Exhaust Pipe Hanger	1-5
53-02322-001	Clamp, 5"	1-5	53-15851-008	Valve, Fan Motor Control	6-3
53-02322-0002	Clamp, 4"	1-5	53-15942-006	Axle Asm, F175 4.10	3-2
53-02345-0002	Link, Leveling Valve	3-3	53-16126-005	Clamp, "T", Bolt 6"	1-6
53-02351-000	Probe, Liquid Level	7-4	53-16126-009	Clamp "T", Bolt 4.50"	1-6
53-07693-001	Tube, Dipstick	2-3	53-16231-003	Adapter, Axle	3-2
53-08210-000	Valve, Throttle 5-1		53-16231-004	Cap, Axle	3-2
53-08727-000	Clamp, Rod End	3-3	53-16690-007	Heater Immersion Block (N/S)	1-1
53-09007-000	Clamp, 5/8"	1-4	53-16762-000	Kit, Trans Shifter	2-2
53-09054-000	Valve, Bleeder	1-4	53-16841-000	Air Dryer, 12VDC	5-1
53-09370-000	Anchor, Coupling Elbow	5-1	53-16841-001	Air Dryer, 12VDC	5-4
53-09798-000	Indicator, Air Restriction	1-6	53-16841-001	Air Dryer, 12VDC	5-5
53-09943-000	Saddle, Isolator Mtg	3-3	53-18056-000	Radiator	1-4
53-11639-000	Filter Asm, Trans	2-1	53-18094-000	Adjuster, Manual Slack	4-1
53-11668-000	Brkt, Air Tank 5-3		53-18835-000	Oil Cooler Asm	6-1
53-11916-001	Luberfiner	1-8	53-18865-000	Cooler, Charge Air	1-6
53-11924-000	Valve, Brake Relay R14	5-1	53-18882-001	Clamp, Constant Torque	1-6
53-11959-000	Oil Cooler Trans	1-4	53-18882-002	Clamp, Constant Torque	1-6
53-12086-000	Pulse Generator	7-1	53-18882-004	Clamp, Constant Torque	1-6
53-12450-001	Nut, LH Inner	3-10	53-19322-006	Starter Asm, 12V	1-1
53-12450-002	Nut, RH Inner	3-10	53-19523-001	Fan, 26" Dia	6-3
53-12710-001	Cap, Frt Hub 3-6		53-19771-010	Valve, Leveling w/Rod	3-1
53-12710-002	Cover, Rr Hub	3-5	53-20116-001	Radius Rod Asm, Adj Lower	3-3
53-12710-003	Cover, Lug Nut	3-5	53-20116-002	Panhard Rod Asm, Adj	3-3
53-12710-003	Cover, Lug Nut	3-6	53-20652-000	Nut, LH Inner Wheel	3-5
53-13109-002	Nut, Hxhd Castle .75"-16	3-3	53-20652-000	Nut, LH Inner Wheel	3-6
53-13807-001	Freon Compressor	1-1	53-20653-000	Nut, RH Inner Wheel	3-5
53-13894-XXX	Weight, Wheel *	3-5	53-20653-000	Nut, RH Inner Wheel	3-6
53-13895-001	Nut, RH Outer	3-10	53-20653-000	Nut, RH Inner Wheel	3-6
53-13895-001	Nut, RH Outer Wheel	3-5	53-20873-000	Valve, Air Tank Drain 1/4"	5-1
53-13895-001	Nut, RH Outer Wheel	3-6	53-21256-000	Column Asm, Tilt Tele Strg (N/S)	3-7
53-13895-002	Nut, LH Outer	3-10	53-21260-001	Shaft, Intern Strg (N/S)	3-7
53-13895-002	Nut, LH Outer Wheel	3-5	53-21364-007	Clamp, Constant Tension	1-4
			53-21364-012	Clamp, Constant Tension	1-4
			53-21370-000	Vent, Fuel Tank	1-3
			53-21580-000	Valve, Quick Release QR-1	5-1
			53-21756-000	Valve, Single Check 1/2"	5-1
			53-21900-000	Gear Asm, Steering	6-6
			53-22004-000	Tank Asm, Fuel	1-3

53-22405-001	Driveline Asm, 1610 Series	2-4
53-22412-000	Reservoir Asm, Hydraulic	6-4
53-22412-001	Dipstick, Hydraulic Reservoir	6-4
53-22412-002	Element, Hydraulic Fluid Filter	6-4
53-22412-004	Brkt, Hydraulic Res Mtg	6-4
53-22440-001	Cap, Hydraulic Res Breather	6-4
53-22578-002	Stem, Tire Valve	3-5
53-22644-001	Strap, U-Joint Mtg	2-4
53-22644-002	Bolt, U-Joint Mtg	2-4
53-22802-000	Kit, Fuel Tank Fill	1-3
53-23149-001	Axle Asm, Rr RS17145 Stud	2-4
53-23168-000	Arm, Pitman	6-6
53-23170-002	Drag Link	3-7
53-23200-000	Chamber Asm, LH Brake	5-1
53-23200-001	Chamber Asm, RH Brake (N/S)	5-1
53-23312-000	Kit, Rear Suspension	3-1
53-23317-000	Rear Brake Chamber	5-1
53-23335-000	Adaptor	7-1
53-23335-001	Tang, Drive	7-1
53-23959-000	Protector, Wheel Guard	3-5
53-23959-001	Protector, Wheel Guard	3-5
53-24184-000	Transmission Asm, Mt643	2-4
53-24269-000	Isolator Asm, Engine Mtg	1-1
53-24382-000	Spring, Return	1-7
53-24625-000	Engine Asm, Cat 3116, 250 HP	1-1
53-24718-000	Cap, Oil Fill Tube	1-1
53-24727-000	Belt, 7 Rib	1-1
53-24744-001	Separator, Fuel/Water	1-1
53-24982-000	Muffler	1-5

## 54

54-00029-001	Clamp, Exhaust	1-5
54-11199-001	Bolt, Button Head .5"-13x1.75"	3-3
54-11334-019	Bolt, Hxhd 1-8x6" Gr 5	3-1
54-11340-013	Bolt, Hxhd 3/4"-10x3.50" Gr 5	3-1
54-11359-016	Bolt, Hxhd 1.0"-12x4.50" Gr 8	3-3
54-12540-009	Locknut, Nylok 1/2"-13 Gr 5	3-1
54-12540-012	Locknut, Nylok 3/4"-10 Gr 5	3-1
54-12540-014	Lockwasher, Nylok 1-8 Gr 5	3-1
54-12551-014	Locknut, Nylok 1.0"-12 Gr 8	3-3
54-12601-012	Washer, Flat, Hard	1-1
54-12601-012	Washer, Hard Flat	3-3
54-13043-009	Bulkhead, Fitting #12	5-1
54-13093-002	Bulkhead, Fitting 1/8"	5-1
54-13093-005	Ftg, Blkhd 1/4 NPT x 3/4-16 SAE	7-3
54-17491-026	Bolt Metric, M16 X 110 MM Lg	1-1

## 55

55-00274-001	Fitting, Air Manifold	5-1
55-00334-000	Manifold, Fitting	7-1
55-00700-000	Adaptor, Fan Mtg	6-3
55-02352-000	Mount, Vibration	1-4
55-07708-000	Strap, Fuel Tank Mtg	1-3
55-07709-000	Liner, Fuel Tank Mtg	1-3
55-07710-000	Liner, Fuel Tank	1-3
55-09663-000	Crossmember Asm	1-10
55-10031-000	U-Bolt, Driveline Guard	2-4
55-11196-001	Tube, Upper Radius Rod	3-3
55-13440-000	Crossmember Asm	1-10
55-13441-000	Crossmember Asm, Panhard Rod Mtg	1-10
55-13442-000	Gusset, Panhard Crossmember	3-3
55-13443-000	Brkt, Panhard Rod Mtg	3-3
55-13444-000	Plate, Panhard Rod Backing	3-3
55-13445-000	Spacer, Panhard Rod Brkt	3-3
55-13446-000	Brkt, Crossmember	3-3
55-13447-000	Brkt, Panhard	3-3
55-13489-000	Brkt, LH Air Spring Mtg	3-3
55-13490-000	Brkt, RH Air Spring Mtg	3-3
55-14204-000	Brkt, LH Shock Mtg	3-3
55-14336-000	Swaybar Asm	3-3
55-14533-000	Motor, Hydraulic Fan 6-3	
55-14623-000	Washer	3-3
55-14623-000	Washer	3-3
55-14819-000	Tower, RH Torque Rod	3-3
55-14820-000	Tower, LH Torque Rod	3-3
55-14856-000	Bushing	3-3
55-15373-001	Crossmember, Air Spring Mtg	3-2
55-15771-004	Hydraulic Pump, Belt Driven	6-2
55-16468-019L	Frame Rail, Raised LH	1-10
55-16468-019R	Frame Rail, Raised RH	1-10
55-17735-000	Manifold, Temp Sender	2-1
55-17735-000	Manifold, Temp Sender	7-1
55-18880-000	Air Tanks, Dual Chamber	5-1
55-18880-000	Air Tanks, Dual Chamber	5-3
55-21822-000	Crossmember Asm	1-10
55-21825-000	Crossmember Asm	1-10
55-23022-000	Pulley, Hydraulic Pump	6-2
55-24264-000	Support Asm, Frt Engine	1-1
55-24265-000	Brkt, Frt Engine Support	1-1
55-24266-000	Brkt Asm, Engine Rr	1-1
55-24303-000	Brkt Asm, Hydraulic Pump Support	6-2
55-24304-000	Plate, Hydraulic Pump Mtg	6-2
55-24353-001	Rail, LH Inner Reinforcement	1-10
55-24353-001	Rail, RH Inner Reinforcement	1-10
55-24416-000	Pipe, Radiator Outlet	1-4
55-24417-000	Pipe, Engine Inlet	1-4
55-24418-000	Pipe, Radiator Inlet	1-4
55-24482-000	Pipe, Engine Air Intake	1-6
55-24483-000	Pipe, Charge Air Cleaner Inlet	1-6
55-24484-000	Pipe, Charge Air Cooler Outlet	1-6



55-24516-000	Pipe Asm, Exhaust	1-5
55-24552-000	Pipe Asm, Turbo Outlet	1-5
55-24553-000	Pipe, Exhaust Tail	1-5
55-24719-000	Tube Asm, Engine Oil Fill	1-1

## 56

56-00031-005	Hose, Hump Reducer	1-6
56-00031-019	Hose, Hump	1-4
56-00033-000	Gasket, Air Governor	5-1
56-00513-20.00	Hose, Drain	1-2
56-02138-000	Tape, Adhesive 1.0"	5-3
56-07695-000	Bushing, Radiator Mtg	1-4
56-09014-018.00	Hose, 5/8" Silicone	1-4
56-09014-034.00	Hose, 5/8" Silicone	1-4
56-09021-004.00	Hose, Silicone	1-4
56-09703-001	Mount, Vibration	6-3
56-14036-000	Tubing, Nylon Black	5-2
56-14037-000	Tubing, Nylon Black	5-2
56-14040-000	Tubing, Nylon Red	5-2
56-14041-000	Tubing, Nylon Red	5-2
56-14049-000	Tubing, Nylon Green	5-2
56-14050-000	Tubing, Nylon Green	5-2
56-14051-000	Tubing, Nylon Green	5-2
56-14052-000	Tubing, Nylon Green	5-2
56-14053-000	Tubing, Nylon Brown	5-2
56-14054-000	Tubing, Nylon Brown	5-2
56-14056-000	Tubing, Nylon Silver	5-2
56-16734-000	Hose, Rubber	1-4
56-17572-000	Hose, Special	1-9
56-18875-001	Hose, Hump, Hi Temp Silicone	1-6
56-18875-003	Hose, Hump, Hi Temp Silicone	1-6
56-18875-004	Hose, Hump, Hi Temp Silicone	1-6
56-21886-000	Tubing, Nylon Red	5-2
56-21887-000	Tubing, Nylon Orange	5-2
56-21888-000	Tubing, Nylon Brown	5-2
56-24485-000	Hose, Hi Temp Silicone	1-6
56-24594-000	Elbow, 90	1-4

## 59

59-09885-000	Decal, "Battery Switch"	7-4
59-16991-000	Decal, Brake Switces (Not shown)	7-3
59-18394-000	Decal "Use Dexron II"	6-4
59-21175-000	Decal, Rr Run Relay Mtg	7-2

## 82

82-00104-002	Tie Rod Asm w/Clamps	3-7
82-00155-000	Screw, Cam Brkt	4-1
82-00156-000	Bolt, Spider Mtg	4-3
82-00194-000	Screw, Cam Brkt	4-3
82-00197-000	Brkt Asm, LH Chamber	4-3
82-00408-000	Motor, 12 VDC	1-9
82-00476-000	Screw, Torx	6-6
82-00489-000	Washer	6-3
82-00491-000	Cover Asm, Motor w/Flow Divider *	6-3
82-00492-000	Pin, Dowel	6-3
82-00493-000	Plate, Gear	6-3
82-00494-000	Body Asm, Motor	6-3
82-00496-000	Capcsrew, Special Head	6-3
82-00536-000	Wingnut, Reservoir	6-4
82-00536-002	Spring, Element Retainer	6-4
82-00536-003	Washer, Retainer	6-4
82-00872-000	Cap, King Pin	3-6
82-00872-000	Fitting, Grease	4-1
82-00872-000	Fitting, Grease	4-3
82-00873-000	Screw, King Pin Cap	3-6
82-00994-000	Brkt Asm, RH Chamber	4-3
82-01105-000	Bearing, Cup	3-4
82-01106-000	Bearing, Cone	3-4
82-01125-000	Seal, Pinion	3-4
82-01679-000	Key, Drive Shaft	6-3
82-01723-000	Bearing, King Pin Thrust	3-6
82-01850-000	Tube, Brush	1-9
82-01853-000	Brush Asm, w/Spring 12 VDC	1-9
82-02157-000	Sensor Asm, Speedo	3-6
82-02164-000	Adjuster, Manual Slack	4-3
82-02205-000	Breather Asm	3-5
82-02210-000	Seal Asm, Lwr King Pin	3-6
82-02223-000	Seal Asm, Frt Wheel Bearing	3-6
82-02241-000	Seal, Camshaft	4-1
82-02241-000	Seal, Camshaft	4-3
82-02243-000	Seal Asm, Inner Wheel	3-5
82-02379-000	End Asm, LH Tie Rod	3-7
82-02380-000	End Asm, LH Tie Rod	3-7
82-02392-000	Spider Asm, LH Frt w/Seal	4-3
82-02393-000	Spider Asm, RH Frt w/Seal	4-3
82-02393-002	Spider Asm, RH Frt	4-3
82-02406-000	Shoe Asm, Frt Brake	4-3
82-03169-000	Locknut, Spider Mtg	4-1
82-03172-000	Nut, Axle Stud	3-5
82-03173-000	Locknut	4-1
82-03173-000	Locknut, Spider Mtg	4-3
82-03189-000	Plug, Oil Fill	3-5
82-03200-000	Bolt, Spider Mtg	4-1
82-03210-000	Screw, Hub Cap	3-6
82-03283-000	Pin, Shoe Retainer	4-1
82-03283-000	Pin, Shoe Retainer	4-3

**MOTOR HOME CHASSIS MHMS 3116**

82-03288-000	Bushing, Anchor Pin	4-1	82-04167-000	Stud, Case	1-9
82-03288-000	Bushing, Anchor Pin	4-3	82-04168-000	Washer, Thrust	1-9
82-03294-000	Bushing, Camshaft	4-1	82-04180-000	Cone, Outer Wheel Bearing	3-5
82-03294-000	Bushing, Camshaft	4-3	82-04225-009	Flange Asm, 1" NPT (N/S)	1-9
82-03298-000	Bushing, King Pin	3-6	82-04226-001	Screw w/Washer	1-9
82-03308-000	Nut, Outer Wheel Bearing	3-5	82-04226-002	Nut	1-9
82-03319-000	Nut, Inner Wheel Bearing	3-6	82-04226-003	Lockwasher	1-9
82-03321-000	Nut, Inner Wheel Bearing	3-5	82-04226-004	Plug, Drain 1/8" NPT	1-9
82-03323-000	Nut, Draw Key	3-7	82-04226-009	Stator, 12 VDC	1-9
82-03330-000	Lockring, Pinion	3-4	82-04227-003	Cap, Brush	1-9
82-03337-000	Washer, Axle Stud	3-5	82-04254-000	Armature Asm, 12VDC	1-9
82-03344-000	Lockring, Camshaft	4-3	82-04477-000	Washer, Flat	4-1
82-03344-000	Lockring, Camshaft	4-1	82-04477-000	Washer, Flat	4-3
82-03348-000	Washer, Hub Cap	3-6	82-04512-000	Gear Asm, Drive Shaft	6-3
82-03348-000	Washer, King Pin Cap	3-6	82-04514-000	Gear Idler	6-3
82-03353-000	Washer, Pierced	3-6	82-04523-002	Seal, Inner Wheel	3-10
82-03356-000	Washer, Inner Spacer	4-1	82-04528-000	Bearing, Outer Cup	3-10
82-03356-000	Washer, Inner Spacer	4-3	82-04528-001	Bearing, Outer Cone	3-10
82-03357-000	Washer, Bearing Jam Nut	3-6	82-04529-000	Gasket, Axle	3-8
82-03379-000	Washer, Spacer	4-3	82-04529-000	Gasket, Axle Shaft	3-10
82-03379-000	Washer, Spacing	4-1	82-04530-000	Lockwasher	3-9
82-03388-000	Washer, Thrust (Pinion Gear)	3-4	82-04530-000	Nut	3-8
82-03396-000	Washer, Outer Spacer	4-1	82-04531-000	Washer	3-10
82-03396-000	Washer, Outer Spacer	4-3	82-04729-001	Brkt Asm, RH Chamber w/o Bushing	4-3
82-03407-000	Washer	3-4	82-04729-002	Brkt Asm, LH Chamber w/o Bushing	4-3
82-03417-000	Washer, Cam Brkt	4-1	82-05682-000	Screw, Shaft Adj	6-5
82-03417-000	Washer, Cam Brkt	4-3	82-05683-000	Bolt, Side Cover	6-5
82-03452-000	Plug, Magnetic Drain	3-5	82-05786-000	Plug, Side Cover Vent	6-5
82-03455-000	Pin, Brake Shoe Anchor	4-1	82-05799-000	Retainer, Adj Screw	6-5
82-03455-000	Pin, Brake Shoe Anchor	4-3	82-06026-000	Kit, 6" Brake Lining	4-3
82-03458-000	Nut, Steering Arm	3-7	82-06191-001	Rod Asm, Push	4-4
82-03483-000	Key, Tie Rod/Steering Arm	3-7	82-06191-002	Spring, Return	4-4
82-03501-000	Gasket, Chamber Brkt	4-1	82-06191-003	Body Asm, Chamber	4-4
82-03501-000	Gasket, Chamber Brkt	4-3	82-06191-004	Clamp Asm, Chamber	4-4
82-03504-000	Roller, Brake Shoe	4-1	82-06191-005	Diaphragm	4-4
82-03504-000	Roller, Brake Shoe	4-3	82-06191-006	Cover Asm, Chamber	4-4
82-03624-000	Shim, King Pin 1.010"	3-6	82-06606-000	Hub Asm, w/o Studs	3-5
82-03633-000	Shim, King Pin 0.005"	3-6	82-06871-000	U-Joint, Cross Kit, 1610 Series	2-4
82-03697-000	Gasket, Axle Shaft	3-5	82-06874-002	Yoke, Flange, 1610 Series	2-4
82-03705-000	Gasket, Frt Hub Cap	3-6	82-07928-000	Center, Axle Beam	3-6
82-03763-000	Camshaft, RH Frt	4-3	82-07929-001	Key, Upr Draw	3-7
82-03769-000	Camshaft, LH Frt	4-3	82-07929-002	Key, Lwr Draw	3-7
82-03835-000	Spring, Shoe Retainer	4-1	82-07929-003	Screw, Centering Stop	3-6
82-03835-000	Spring, Shoe Retainer	4-3	82-07929-004	Nut, Stop Screw	3-6
82-03837-000	Spring, Shoe Retainer	4-1	82-07930-000	Knuckle Asm, LH	3-6
82-03837-000	Spring, Shoe Retainer	4-3	82-07930-001	Knuckle Asm, RH	3-6
82-03869-000	Pin, Knuckle (king Pin)	3-6	82-07932-002	Spider Asm, LH Frt	4-3
82-03871-000	Retainer, Roller	4-1	82-07933-001	Nut, Outer Wheel Bearing	3-6
82-03871-000	Retainer, Roller	4-3	82-07949-001	Nut, Pinion	3-9
82-03886-000	Arm, LH Steering	3-7	82-07949-002	Washer, 1.50" Flat	3-9
82-03886-001	Cotter, Steering Arm	3-7	82-07949-003	Seal, Pinion	3-9
82-03915-000	Drum, Brake 16.5X6	3-6	82-07949-004	Bolt, Pinion Cage	3-9
82-03944-000	Spider	3-4	82-07949-005	Bearing, Cone	3-9
82-03977-000	Backer, Speedo Pick-Up	3-6	82-07949-006	Bearing, Cup	3-9
82-04113-000	Shock Absorber	3-1	82-07949-007	Cage Asm, Pinion	3-9
82-04128-000	Washer, Spring	1-9	82-07949-008	Bearing, Roller	3-9
82-04129-000	Slinger	1-9	82-07949-009	Lockring, Pinion	3-9

82-07950-000	Kit, Pinion Shim	3-9	82-09642-001	Spring Asm, Air	3-1
82-07951-001	Carrier Asm w/Cap	3-9	82-09642-002	U-Bolt, 7/8"-14x4 11/16x11 1/2"	3-1
82-07951-002	Key	3-9	82-09642-003	Plate Asm, U-Bolt Spacer	3-1
82-07951-003	Cotter	3-9	82-09642-005	Plate, Locking	3-1
82-07951-004	Ring, Adjusting	3-9	82-09643-001	Bolt, Hxhd 1.5"-6x7" Gr 5	3-1
82-07951-005	Washer	3-9	82-09643-002	Locknut, Flex 1.25"-7 SPS	3-1
82-07951-006	Bolt, Diff Cap	3-9	82-09643-003	Nut, Hxhd 7/8"-14 Tall	3-1
82-07952-001	Scoop, Oil	3-9	82-09643-004	Washer, Bearing	3-1
82-07952-002	Washer	3-9	82-09643-005	Lockwasher, 1.5" Int Tooth	3-1
82-07952-003	Bolt, Oil Scoop	3-9	82-09643-006	Washer, 7/8" Flat A-325	3-1
82-07952-006	Rivet, Ring Gear	3-9	82-09643-007	Bolt Asm, Eccentric	3-1
82-07953-001	Bearing, Cup	3-9	82-09643-008	Washer, Anti-Turn	3-1
82-07953-002	Bearing, Cone	3-9	82-09644-001	Hanger Asm, Air Spring Mtg	3-1
82-07953-003	Case, Diff (Plane Half)	3-9	82-09644-002	Hanger Asm, RH Air Spring Mtg	3-1
82-07953-005	Kit, Diff Gears & Cross	3-9	82-09644-003	Mtg Asm, Frt Air Spring	3-1
82-07954-410	Gear Set J175 4.10	3-9	82-09644-004	Brkt Asm, LH Shock Mtg	3-1
82-07955-001	Shim, Pinion 0.50"	3-9	82-09644-005	Brkt Asm, RH Shock Mtg	3-1
82-07955-002	Shim, Pinion 0.10"	3-9	82-09644-006	Brkt Asm, Sway Bar To Frame	3-1
82-07955-003	Shim, Pinion 0.30"	3-9	82-09644-007	Brkt Asm, Sway Bar To Axle	3-1
82-07956-001	Housing, Rear Axle	3-8	82-09644-008	Channel Asm, Cross	3-1
82-07956-002	Breather Asm	3-8	82-09646-001	Beam Asm, LH Load	3-1
82-07956-003	Plug	3-8	82-09646-002	Beam Asm, RH Load	3-1
82-07956-004	Case, Diff (Flange Half)	3-9	82-09646-003	Torque Rod Asm, 18"	3-1
82-07956-004	Lockwasher	3-8	82-09646-004	Plate, Clamping	3-1
82-07956-004	Washers	3-9	82-09646-004	Sway Asm, RH Load	3-1
82-07956-005	Bolt, Carrier Mtg	3-9	82-09646-005	Beam Asm, Torque 2.5"x18	3-1
82-07956-005	Capcsrew	3-8	82-09646-006	Bushing, Torque Beam	3-1
82-07956-006	Nut, Inner Wheel Bearing	3-8	82-09646-007	Bushing, Sway Bar/Torque Rod 3x1	3-1
82-07956-007	Lockwasher, Wheel Bearing	3-8	82-09646-007	Camshaft, LH Frt	4-1
82-07956-008	Shaft, Axle	3-8	82-09646-008	Rod End, RH w/ Clamp & Bushing	3-1
82-07957-001	Drum, Rr 6x16.5	3-10	82-09646-009	Rod End, LH w/ Clamp & Bushing	3-1
82-07957-002	Bolt, Drum Mtg	3-10	82-09649-001	Housing, Steering Gear	6-5
82-07957-003	Nut	3-10	82-09649-002	Seal, Output	6-5
82-07958-001	Stud, Axle Shaft	3-10	82-09649-003	Ring, Retaining	6-5
82-07958-002	Stud, LH Wheel	3-10	82-09649-004	Bearing, Roller	6-5
82-07958-003	Hub, Rr	3-10	82-09649-005	Seal, Dirt	6-5
82-07958-004	Bearing, Inner Cup	3-10	82-09649-006	Fitting, Grease	6-6
82-07958-004	Cup, Inner Wheel Bearingg	3-5	82-09649-007	Washer, Spacer	6-5
82-07958-005	Bearing, Inner Cone	3-10	82-09650-001	Gasket, Side Cover	6-5
82-08162-005	Washer	3-4	82-09650-002	Shaft, Sector	6-5
82-08473-000	Pump, Body	1-9	82-09650-003	Nut, Jam	6-5
82-08475-000	Seal, Impeller	1-9	82-09650-004	Shaft Asm, Input Worm Valve	6-5
82-08475-003	Impeller	1-9	82-09650-005	Shaft, Worm	6-5
82-08476-000	Bearing, Inc w/Armature	1-9	82-09653-001	Ball	6-6
82-08477-000	Gasket, Cover	1-9	82-09653-003	Seal, Guide Cap	6-6
82-08749-002	Kit, Shim	3-4	82-09653-004	Cap, Ball Rtn Guide	6-6
82-08997-000	Cup, Inner Wheel Bearing	3-6	82-09653-005	Piston Asm, Rack	6-5
82-09000-000	Cone, Inner Wheel Bearing	3-6	82-09653-006	Piston, Rack	6-5
82-09026-000	Cup, Outer Wheel Bearing	3-6	82-09653-007	O-Ring	6-6
82-09027-000	Cone, Outer Wheel Bearing	3-6	82-09653-008	Ring, Piston Seal	6-6
82-09028-000	Cup, Outer Wheel Bearing	3-5	82-09672-001	Rod, Spacer	6-5
82-09052-000	Bearing, Inner Cup	3-4	82-09672-002	Spring, Poppet	6-5
82-09153-002	Guide, Ball Rtn Half	6-6	82-09672-003	Tube, Push	6-5
82-09634-001	Plug, Release Stud	4-2	82-09672-004	Poppet	6-5
82-09635-003	Boot, Dust	4-2	82-09672-005	Sleeve Asm, Poppet	6-5
82-09637-000	Housing Asm, Lwr	4-2			
82-09637-003	Spring, Service Rtn	4-2			

**MOTOR HOME CHASSIS MHMS 3116**

82-09672-006	Seal, Input Shaft Dirt	6-5	82-09783-001	Shaft, Stub Yoke	2-4
82-09672-007	Ring, Seal	6-5	82-09783-002	Seal, Dust	2-4
82-09672-008	Washer, Trust (Thick)	6-5	82-09783-003	Shaft, Slip Yoke	2-4
82-09672-009	Bearing, Roller	6-5	82-09783-004	U-Joint, Cross Kit (Special)	2-4
82-09678-001	Washer, Thrust (Thin)	6-5	82-09786-001	Stud Asm, Release	4-2
82-09678-002	Ring, Seal	6-5	82-09786-002	Chamber Asm, Upper	4-2
82-09678-003	O-Ring	6-5	82-09786-003	Diaphragm, Upper	4-2
82-09678-004	Adjuster, Bearing	6-6	82-09786-004	Adapter Asm	4-2
82-09678-005	Locknut, Adjuster	6-6	82-09786-006	Diaphragm, Lwr	4-2
82-09678-006	Hsg, Valve & Bell Plug	6-5	82-09786-007	Rod Asm, Push	4-2
82-09678-007	O-Ring, Seal	6-5	82-09949-000	Kit, Motor Rebuild	6-3
82-09678-008	Ring, Seal	6-5	82-10324-001	Gearset, RS17145 4.56	3-4
82-09678-009	Seal, Input Shaft	6-5	82-10324-002	Case Asm, Diff w/Nest	3-4
82-09681-001	Ring, Retainer	6-5	82-11037-000	Seal, Upper King Pin	3-6
82-09681-002	Bolt, Valve Plug	6-5	82-11252-410	Diff Asm, J175 4.10	3-9
82-09681-003	Seal, Trunnion Dirt/Water	6-5	82-11291-000	Nut, Tie Rod Arm	3-7
82-09681-004	Screw, Poppet Stop	6-5	82-11291-001	Cotter, Steering Arm	3-7
82-09681-005	Seal, Valve Hsg	6-5	82-11377-000	Slinger, RH Oil	3-6
82-09681-006	Ring, Valve Hsg Seal	6-5	82-11711-00	Flange Asm	1-9
82-09681-007	Washer, Stop Screw	6-5	82-11711-000	Cover	1-9
82-09681-008	Cap, Relief Valve	6-5	82-11828-000	Arm, RH Tie Rod	3-7
82-09681-009	O-Ring, Relief Valve	6-5	82-11985-000	Slinger/Rotor Asm, LH Oil	3-6
82-09682-001	Valve, Roller	6-5	82-13010-000	Housing Asm, Rr Axle	3-5
82-09682-002	Plug, Bleed	6-6	82-13011-000	Lockwasher, Wheel Bearing Nut	3-5
82-09682-003	Nut, Jam	6-5	82-13012-000	Shaft, LH Axle	3-5
82-09686-005	Clamp Asm, Lwr	4-2	82-13012-001	Shaft, RH Axle (N/S)	3-5
82-09693-001	Kit, Seal *	6-6	82-13013-000	Dowel, Axle Stud	3-5
82-09693-002	Fit, Stop Screw	6-6	82-13014-000	Slinger, Oil	3-5
82-09730-000	End Asm, Drag Link	3-7	82-13015-000	Cone, Inner Wheel Bearing	3-5
82-09737-004	Clamp Asm, Upper	4-2	82-13016-000	Stud Axle Flange (LH & RH)	3-5
82-09742-000	Kit, 7" Brake Lining	4-1	82-13016-001	Stud, LH Inner Wheel	3-5
82-09764-002	Capscrew, Diff Cap	3-4	82-13016-002	Stud, RH Inner Wheel (N/S)	3-5
82-09764-003	Cage, Pinion	3-4	82-13017-000	Drum, Rr Brake 16.5"x7"	3-5
82-09764-004	Kit, Split Shim	3-4	82-13018-000	Bolt, Hub to Drum	3-5
82-09764-005	Bolt, Ring Gear	3-4	82-13020-000	Shield Dust	3-5
82-09764-006	Locknut, Ring Gear	3-4	82-13021-000	Plug, Hub	3-5
82-09764-007	Kit, Ring Gear Bolt (Items 21&24)	3-4	82-13022-000	Camshaft, RH Frt	4-1
82-09764-008	Capscrew, Diff Case	3-4	82-13023-000	Washer, Flat	4-1
82-09764-009	Nut, Pinion	3-4	82-13024-002	Shoe Asm, Rr Brake	4-1
82-09764-010	Capscrew, Diff (Long)	3-4	82-13026-000	Brkt Asm, LH Chamber	4-1
82-09764-011	Capscrew, Diff (Short)	3-4	82-13026-001	Brkt Asm, RH Chamber	4-1
82-09771-001	Bearing, Outer Cup	3-4	82-13027-000	Sdider Asm, Rr Brake LH/RH	4-1
82-09771-001	Case Asm, Diff Case	3-4	82-13092-000	Gasket, King Pin Cap	3-6
82-09771-002	Bearing Pinion Roller	3-4	82-13099-000	Lockpin, Adj Ring	3-4
82-09771-002	Bearing, Inner Cup	3-4	82-13105-000	Hub Asm, Frt w/Cup (LH/RH)	3-6
82-09771-003	Bearing, Outer Cup	3-4	82-13106-000	Plate, Rotor	3-6
82-09777-006	Ring, Bearing Adj	3-4	82-67953-007	Bolt, Diff Case	3-9
82-09777-007	Capsrew, Pinion Cage	3-4	M101	Tires, 9R22.5 XZA	3-5
82-09778-001	Kit, Diff (Items 23,25,26,27&29)	3-4	M101	Tires, 9R22.5 XZA	3-6
82-09778-002	Washer, Thrust (side Gear)	3-4			
82-09778-003	Gear, Side	3-4			
82-09778-004	Gear, Pinion	3-4			
82-09778-005	Yoke Diff, 1610 Series	2-4			
82-09778-005	Yoke, Diff 1610 Series	3-4			
82-09782-410	Carrier Asm, RS17145 4.10	3-4			